

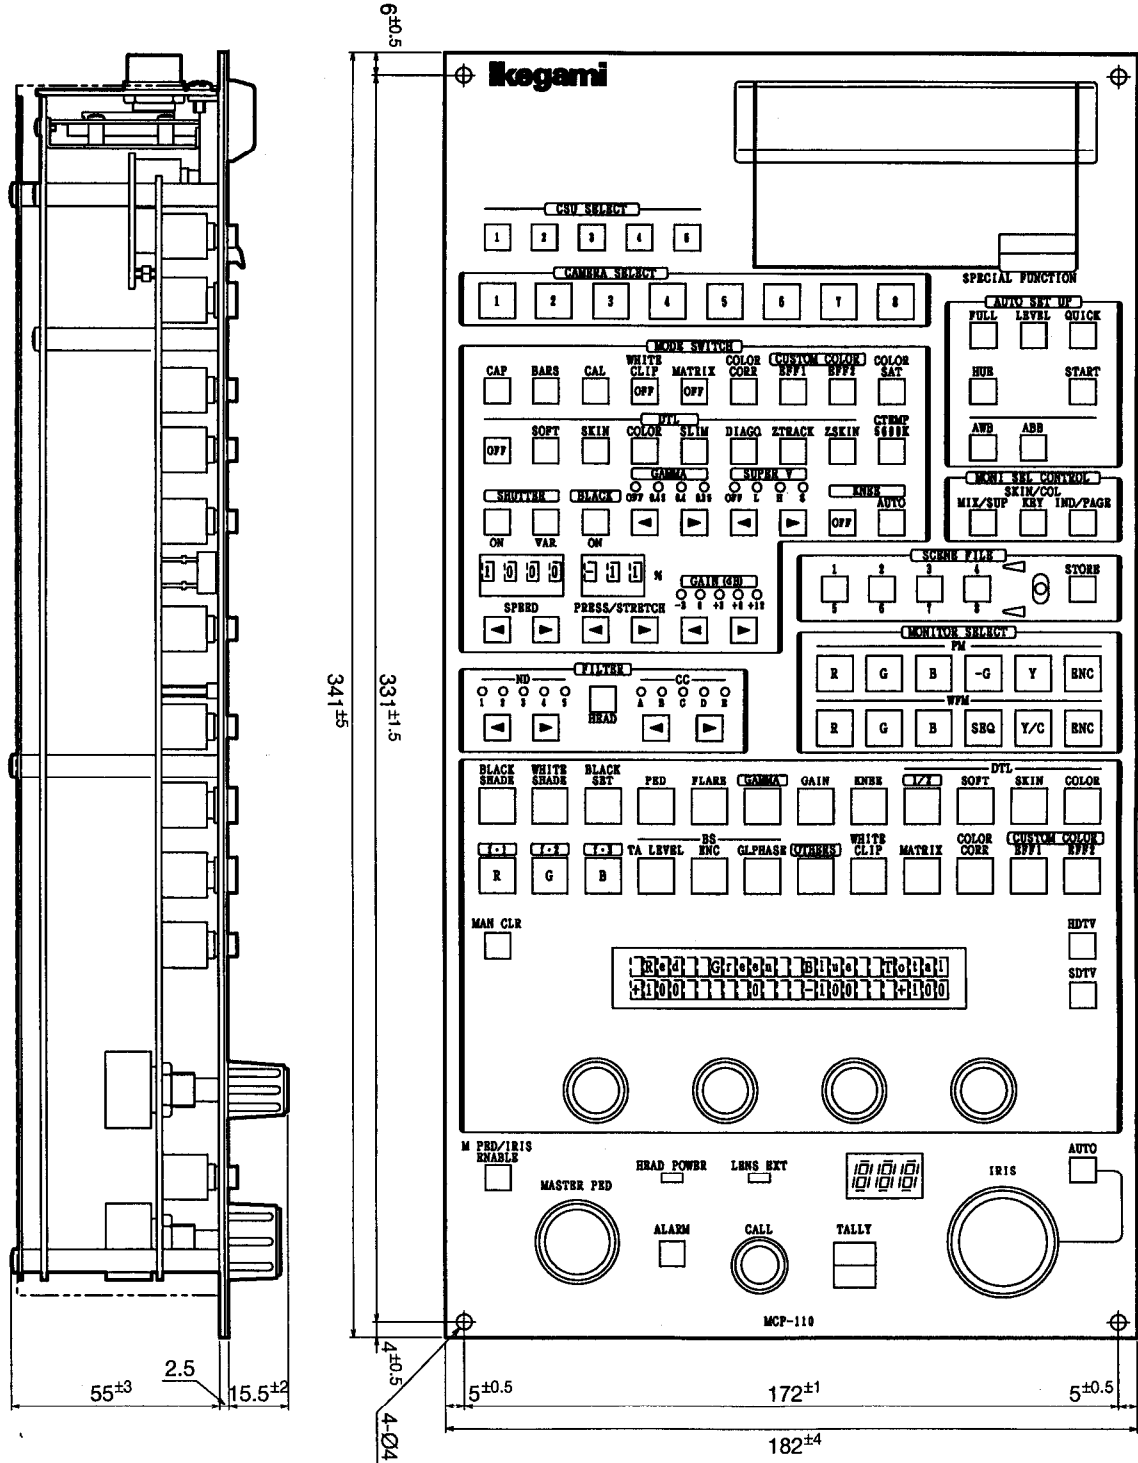


1.4 External Appearance

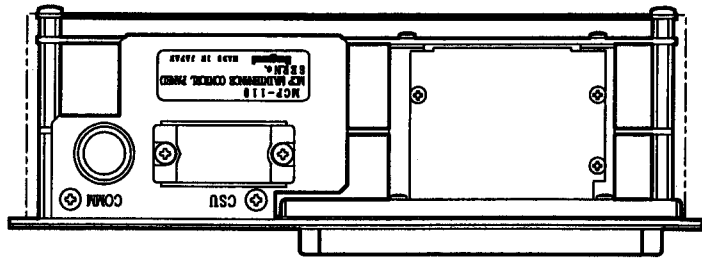

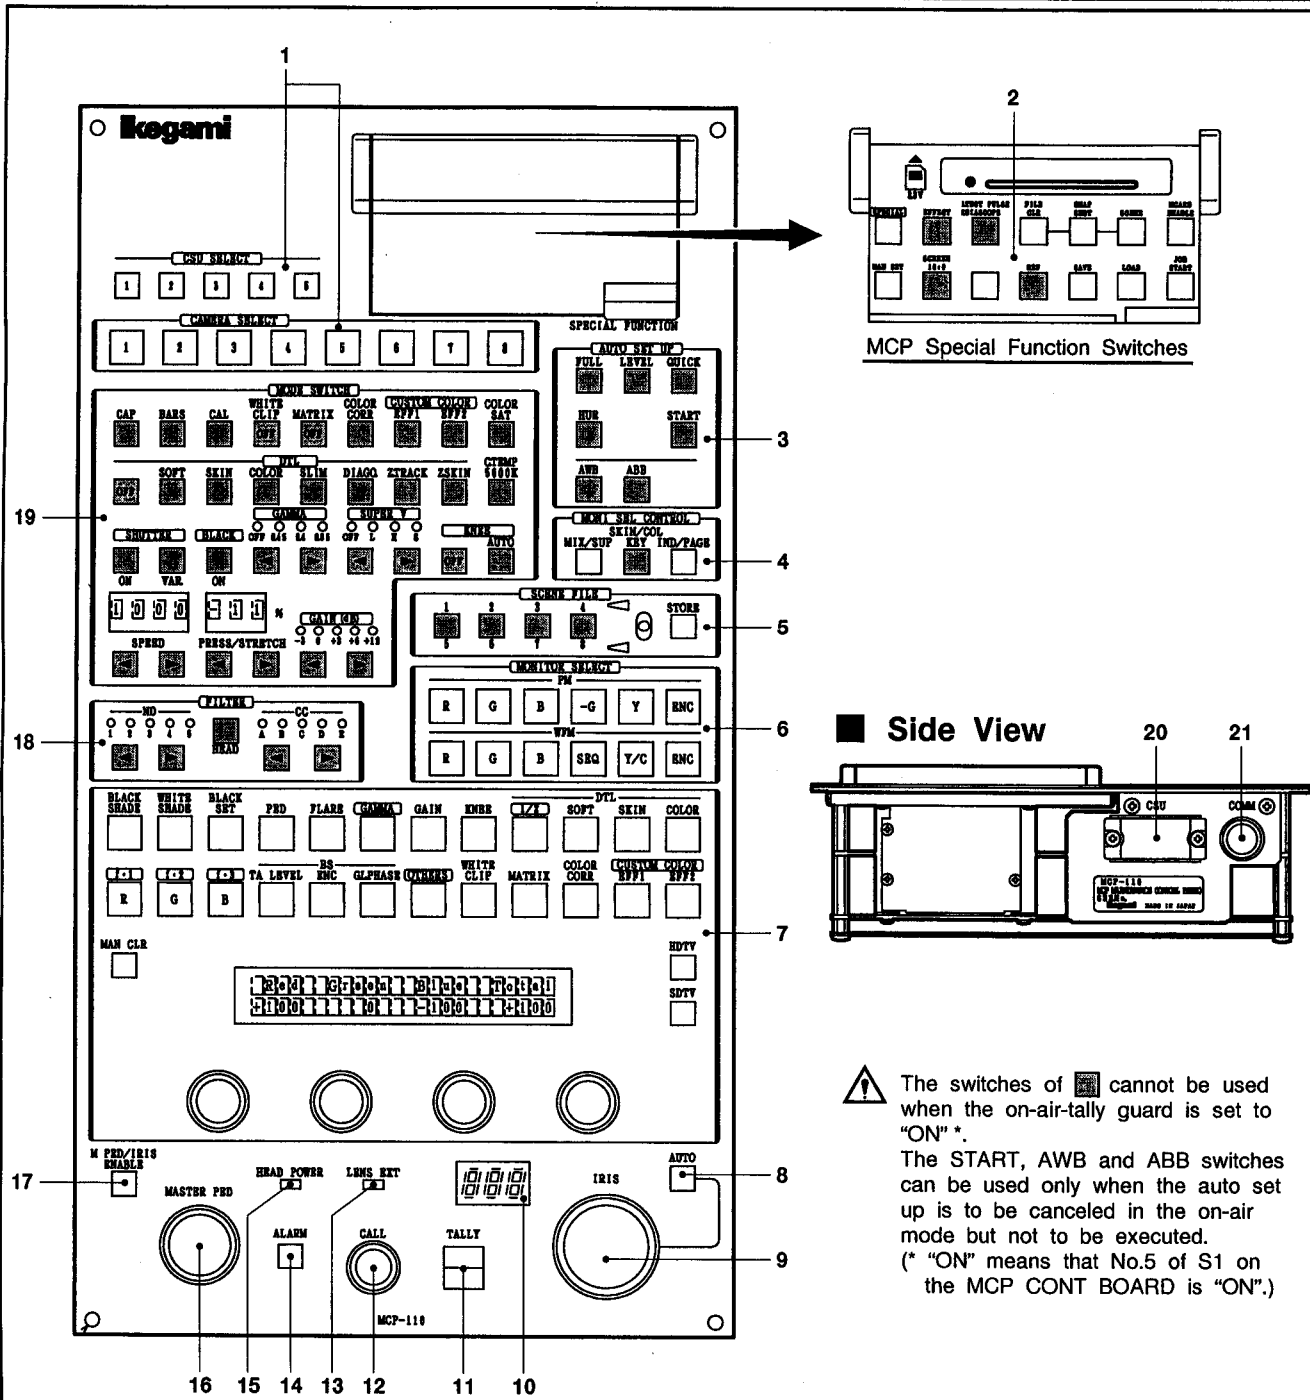

- | | |
|--|-----------------------------|
| 1 CSU SELECT Switches and CAMERA SELECT Switches | 11 TALLY Indicators |
| 2 SPECIAL FUNCTION Switches | 12 CALL Switch |
| 3 AUTO SETUP Switches | 13 LENS EXT Indicator |
| 4 MONITOR SELECT CONTROL Switches | 14 ALARM Indicator |
| 5 SCENE FILE Switches | 15 HEAD POWER Indicator |
| 6 MONITOR SELECT Switches | 16 MASTER PEDESTAL Control |
| 7 CONTROL FUNCTION Switches | 17 M PED/IRIS ENABLE Switch |
| 8 AUTO IRIS Switch | 18 FILTER Switches |
| 9 IRIS Indicator | 19 MODE Switches |
| 10 IRIS Control | 20 CSU Connector |
| | 21 COMMAND Connector |

⚠ The switches of [] cannot be used when the on-air-tally guard is set to "ON"*. The START, AWB and ABB switches can be used only when the auto set up is to be canceled in the on-air mode but not to be executed. (* "ON" means that No.5 of S1 on the MCP CONT BOARD is "ON".)