



Method to Check Software Version (OCP-200)

- 1) Press Knob Free + Next switches at the same time for several seconds, and software version will be displayed on the LED arrays.
- 2) Press Next switch to exit and return to normal OCP operation.

Beginning with software version STR-5088, the software version is displayed on Info page 5/5.

Refer also to the OCP-200 Operation Manual.

Method to Install New Software (OCP-200)

- 1) Download software from the download site to your pc, and then transfer to an SD Memory card.
- 2) Press Panel Enable switch for several seconds, until software update program is displayed on the color LCD screen. Follow on screen instruction, also as follows:
- 3) Insert Memory card with the new software into the OCP.
- 4) Select the file to be loaded using the center up/down arrow switches. If there is just one file, it should come up automatically. Use the up/down switches when there are multiple files on the Memory card. **Note:** file must be ".RDF" type.
- 5) Start process with right down arrow switch.
- 6) Confirm with center down arrow (or select Cancel action with center up, and then use down arrow switch).
- 7) Process takes several minutes, first 'Data Loading', followed by 'Programming.'
- 8) Confirm check sum is correct, then press right down arrow.
- 9) Exit software update program by pressing Panel Enable switch.

Refer also to the OCP-200 Operation Manual.