

# **Ikegami**

**20-INCH**

**TFT-LCD PUBLIC VIEW MONITOR**

**Model : LCM-205N**

**CARD READER MANUAL**

Please read this manual thoroughly before use, and keep it handy for future reference.

# CONTENTS

<i>REMOTE FUNCTIONS</i> .....	2
<i>CONTROLS AND FUNCTIONS</i> .....	3 - 11
<i>SPECIFICATIONS</i> .....	12

This Monitor was  
Manufactured by ISO 9001  
Certified Factory

# REMOTE FUNCTIONS

## - REMOTE CONTROLLER

### 1. ESC

EXIT the Card Reader operating mode

### 2. BACK / NEXT

Quick navigation in Preview Mode

### 3. INFO

Filename display ON/OFF

### 4. MODE

Preview / Slideshow /Single View

### 5. ZOOM

Zoom In/Out.

### 6. JPG/AVI

Displayed file types

### 7. ENTER

Confirm /Enter

### 8. ARROW (◀ ▶ ▲ ▼ )

Left, Right, Up, down navigation

### 9. DISPLAY


Display style per Card reader

### 10. ROTATE

Rotate single images

### 11. SET UP

Settings and setup for Card reader and Change language

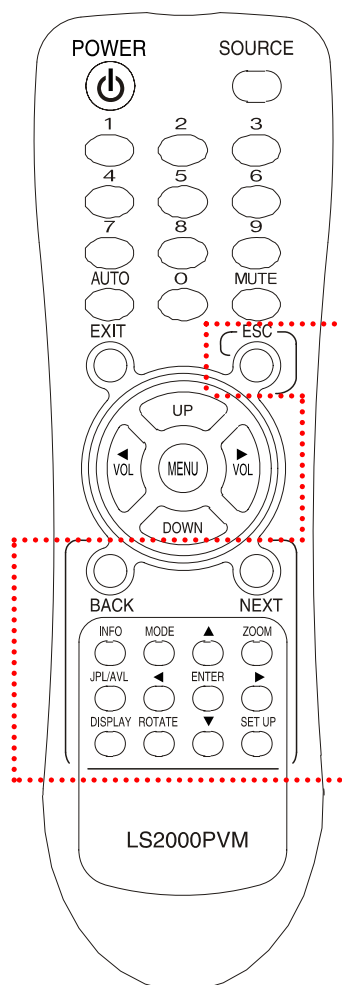

#### Notice :

- If you want to use Card-reader , you have to change source Ch as C-R.

- The card-reader function can control by remote controller.

# CONTROLS AND FUNCTIONS

## 1. Start-up Screen without card inserted



## 2. Photo and AVI Selection

2-1) Press **UP** or **DOWN** button to navigate the green frame until it is located in camera icon shown below.



2-2) Press **ENTER** button, you will see two icons shown on the right side. You can press **LEFT** or **RIGHT** button to choose witch kind of file format you want to explore.



Photo (JPEG) icon

# CONTROLS AND FUNCTIONS



**AVI (Motion JPEG) icon**

2-3) Press **ESC** button, exit this screen.

### 3. Memory Card Selection

3-1) Press **UP** or **DOWN** button to navigate the green frame to memory card icon shown below.



3-2) Press **ENTER** button, you will see four icons shown on the right side.



# CONTROLS AND FUNCTIONS

3-3) Press **LEFT** or **RIGHT** button to navigate witch memory card you want to explore and then press **ENTER** button to explore the selected card.

3-4) If the inserted card has photos, you will see the following screen to show the thumbnail photo.



## 4. Main Setup Screen

4-1) You can use **UP** or **DOWN** button to navigate the tool icon shown below.



Menu Item	Description
Language	Change the OSD language
Slide Duration	Adjust the interval time between each picture during slide display
File Description	Display or hide the file information such as file name and image resolution
Folder Mode	YES : Display the photo within one selected photo NO : Display all the file no matter what folder the files are located
TV Type	Default setting is NTSC

# CONTROLS AND FUNCTIONS

4-2) Press **ENTER** button. Setup screen is shown on screen.

Standard firmware only supported three languages.

i.e., English, Traditional Chinese, Simple Chinese



4-3) Press **UP/DOWN/LEFT/RIGHT** button to choose which parameter you want to change.

After changing the parameters, press **ESC** button to exit the setup screen.

If any parameter is changed, you will see the following screen.

And then, you can press either **ENTER** button to store the modified parameter

or **ESC** button to abort the change.



# CONTROLS AND FUNCTIONS

## 5. Photo Display


5-1) Press **UP/DOWN/LEFT/RIGHT** button to navigate the picture that you want to view.



**Folder Mode : NO**

5-2) If the selected icon is folder, you can press **ENTER** button to go to the sub-folder.

If the selected icon is photo, you can press **ENTER** button to view the photo in full screen mode.

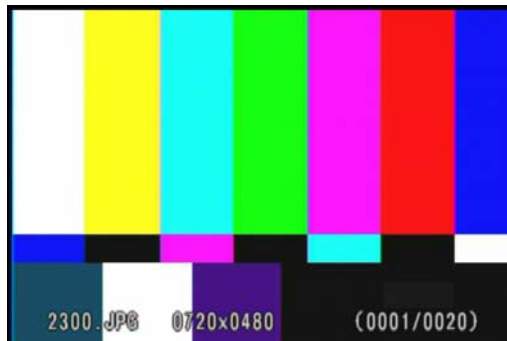

5-3) Press **LEFT/RIGHT** button to navigate the previous/next photo.

5-4) Press **ENTER** button, you will see following setup screen.

And then press **LEFT** or **RIGHT** button to navigate the function shown below.



# CONTROLS AND FUNCTIONS



**Rotate** : Press **ENTER** button to rotate the photo in 90 degrees clockwise.



**ZOOM** : Press **ENTER** button to zoom the photo.



**SLIDE SHOW** : Press **ENTER** button to start to slide the photo automatically.

# CONTROLS AND FUNCTIONS



**DELETE** : Press **ENTER** button to delete displayed photo in memory card.



**SETUP** : Press **ENTER** button to go to main setup screen.

## 6. AVI Playback

6-1) Press **UP/DOWN/LEFT/RIGHT** button to navigate the picture that you want to view.



# CONTROLS AND FUNCTIONS

5-2) If the selected icon is folder, you can press **ENTER** button to go to the sub-folder.

If the selected icon is photo, you can press **ENTER** button to playback the selected AVI.



5-3) Press **LEFT/RIGHT** button to navigate the previous/next AVI.

5-4) Press **ENTER** button, you will see following setup screen.

And then press **LEFT** or **RIGHT** button to navigate the function shown below.



**REPEAT** : Press **ENTER** button to playback current AVI one more time.




**SLIDE SHOW** : Press **ENTER** button to start to slide the photo automatically.

# CONTROLS AND FUNCTIONS



**DELETE** : Press **ENTER** button to delete displayed AVI file in memory card.

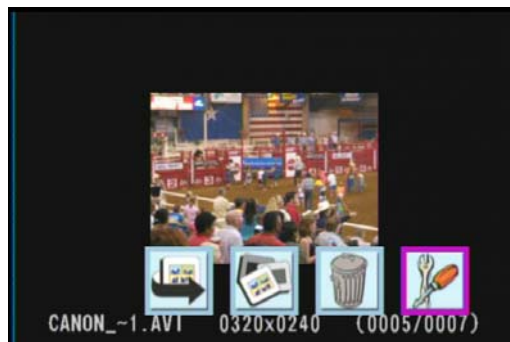

**SETUP** : Press **ENTER** button to go to main setup screen.

# SPECIFICATIONS

## - Card Reader Specification

The card reader is convenient and easy way to share your images with your friends.

Card reader function	
<b>Output interface</b>	- BNC composite Video
<b>Supporting Memory Card</b>	- CF (Compact Flash)
<b>Memory Connector type</b>	- SD (Secure Digital)
	- IBM micro Drive
	- MMC (Multi Media Card)
	- CF
<b>Support file format</b>	- SD/MMC 2 in 1 connector push type
	- JPEG : Display speed (4.5sec for 3 Mbytes JPEG)
<b>Video Resolution</b>	- Motion JPEG (15fps)
	- Support AVI format
	- 320 X 240
<b>Transmitter</b>	- IR remote receiver ready
<b>Signal System</b>	Default setting is NTSC
<b>Aspect ratio</b>	4:3 / 16:9 (Selectable)
<b>Other functions</b>	- Can rotate or enlarge the JPEG Picture
	- Slide Show function
	- Multi Language option

►► **NOTE:** *Technical specifications are subject to change without notice.*