

# TECHNICAL BULLETIN

Ikegami

37 Brook Avenue, Maywood, New Jersey 07607 • (201) 368-9171

To: Distribution

Product: TM20-17R/RA, TM14-17R/RA Color Monitors

Purpose of Modification: To eliminate an input switching problem, where the front Panel LED's indicate the input has switched, but the signal is not appearing on the monitor.

## Modification procedure

1. Remove C807 on the Video Board.
2. Cut the printed circuit on the A-side (component side) of the board as shown with a red circle and arrow in Fig. 1 below.
3. Cut the printed circuit on the B-side (clad side) of the board as shown with a red circle and arrow in Fig. 2 below.
4. Add a jumper wire on the B-side of the board between the thru-holes of the printed circuit, as indicated with 3 arrows and green wire in Fig. 2 below.
5. Attach a new capacitor (C807: P/N EEC S5R5H224)



Fig.1

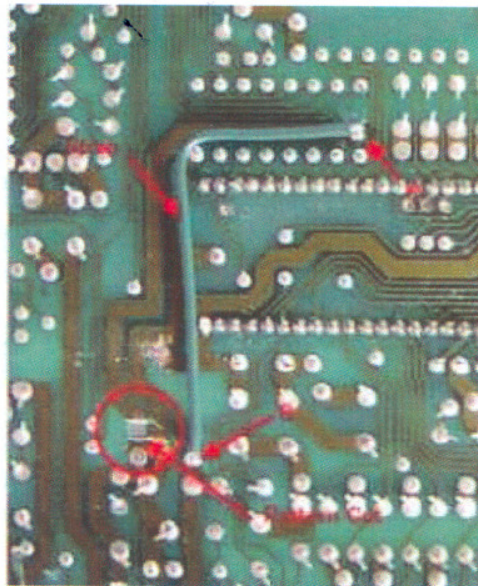


Fig.2