

IKEGAMI TECHNICAL

BULLETIN

37 Brook Avenue, Maywood, New Jersey 07607. (201) 368-9171, Fax (201) 368-2029

Date: Feb, 15, 2013
Engineer: D. Disinger
Page: 1 of 2

To: Distribution

Product: BSF-55

Subject: No head power


There have been occasions when the BSF-55 will not supply head power to the HDK-55/FA-55 camera system. The Diagnostic page of the PM output may appear as follows:

```
*** DIAGNOSTIC INFORMATION ***
Item          Judgement  Item          Judgement
-----
Fiber Single  ON
Head Fan      ***
Head Temp     ***
Head Battery  ***
Head Memory   ***
BS Fan        OK
BS Temp       OK
BS Battery    OK
BS Memory     OK
BS >>> Head  Head >>> BS
OPT Level     *** ***    OPT Level     ---  [ALG]
Comm Status   ***          Comm Status    ***
Cable Connection ---    Genlock       INT
Safety Signal ---
Head ID       ---
System Format  1080I59
```

If this is the case, please remove the 2 screws that attach the cover in the center of the front panel of the base station:



Locate switch S1 that is also labeled “FIBER SINGLE”.

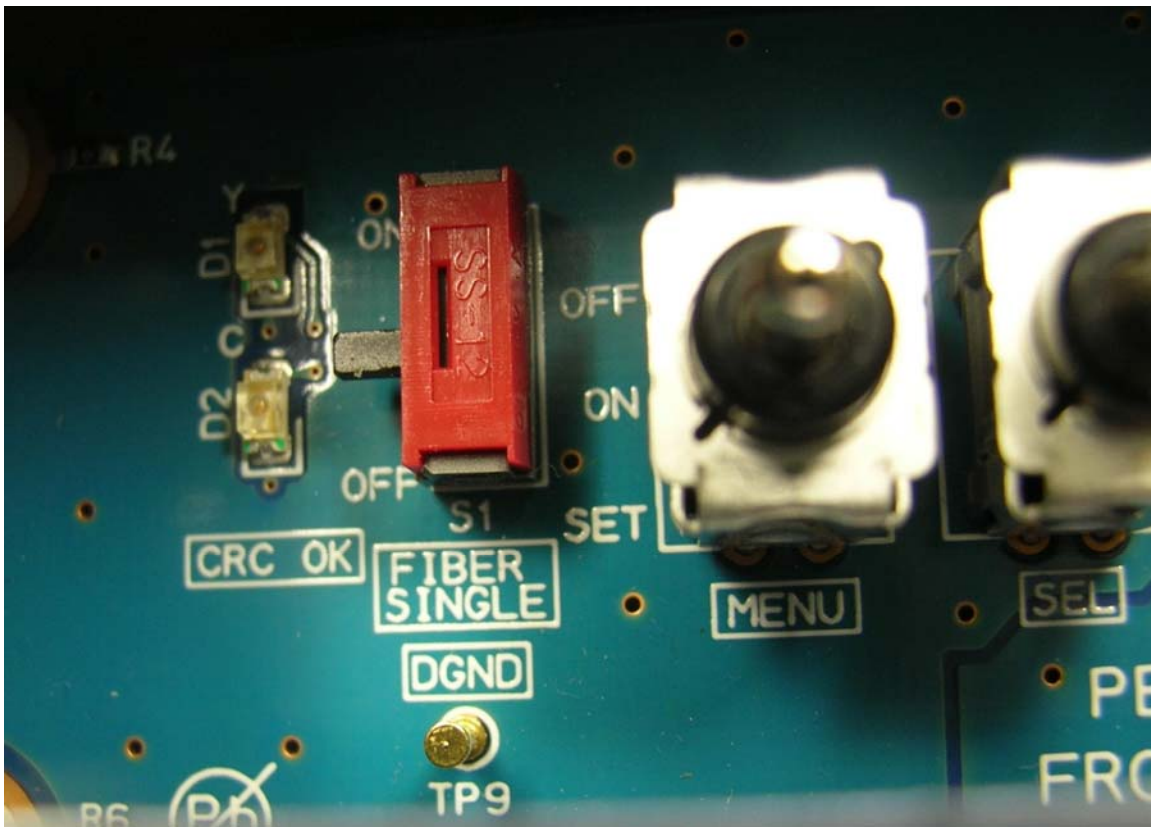

With the base station power off, cycle the switch on and off several times and then finally set the switch in the down (OFF) position. Restore power to the base station and check the Diagnostic page for normal operation. It takes approximately 30 seconds for the base station to complete the power-up sequence.