


LCM-205N Card Reader Quick Start Guide

1. Select the source channel as C-R by the Remote Controller for Monitor.

Press **MENU** button on remote controller (The On Screen Menu appears).

Press **DOWN** button to select Input Source Menu.

Use **VOL <** **VOL >** button to select the C-R.

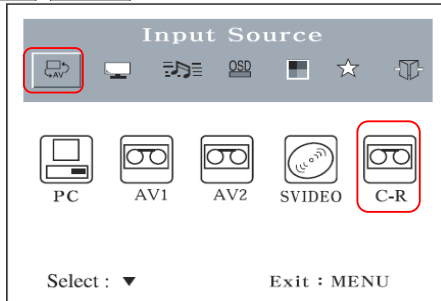

Press **DOWN** button to display the C-R on screen.



2. Setup the picture file that you want to view by the Remote Controller for C-R.


2-1. Photo(JPEG) and AVI(Motion JPEG) Selection

Use **▲** **▼** button on remote controller to select Camera Icon.




Press **ENTER** button.

Use **<** **>** button to select Photo(JPEG File) or AVI(Motion JPEG File).

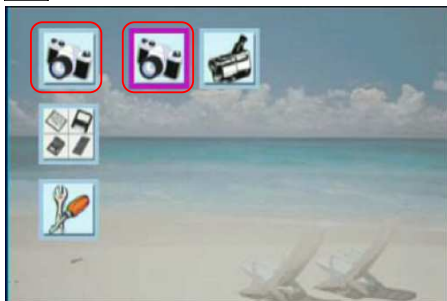


 
Press **ESC** button, exit this screen.

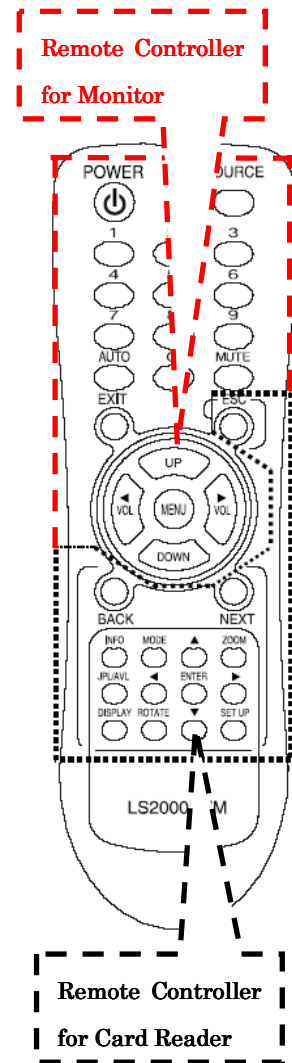

2-3. Memory Card Selection


Press   button on remote controller to select Memory Card Icon.

Press  button.

Use   button to select the type of your Memory Card.




Press  button.

Use   button to select the Folder include the picture file.




Press ENTER button.

Use     button to select the picture that you want to view.

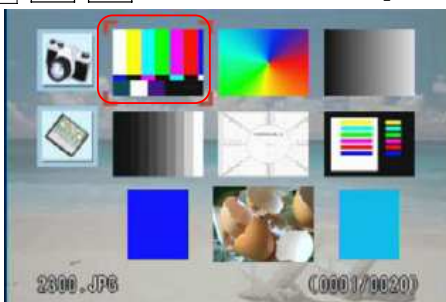

Press  button to display the picture on screen.

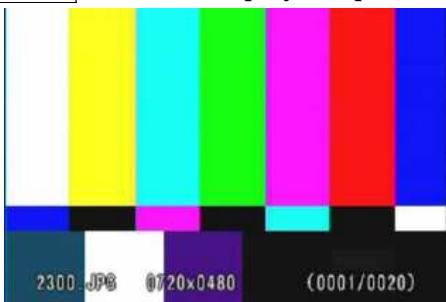

Notice : When you want to use the Card Reader, you have to change the source channel as C-R.
The Card Reader Functions are operated only by the remote controller.