

TECHNICAL BULLETIN

Ikegami

37 Brook Avenue, Maywood, New Jersey 07607 • (201) 368-9171

REF NO: 104.95

DATE: 4/20/95

ENG: R. MOLCZAN

PAGE: 1 of 2

TO: ALL REGIONAL OFFICES AND FIELD SERVICE ENGINEERS

PRODUCT: VF7-10 VIEWFINDER FOR HK-366 / HK-377

SUBJECT: RASTER SCAN SIZE SWITCHING

The following modification should be used if erratic operation of the SCAN SIZE select feature is encountered.


PROCEDURE:

1. Locate the VF SCAN BOARD
2. Remove resistors R201 and R203 (see figure #1)
3. Replace these resistors (10K Ω) with 6800 Ω 1/2W resistors (Part# ERDS1VJ682T or equivalent)

This completes this procedure. No additional adjustments should be necessary.

TR210 6-D
 TR202 6-F

D101 1-E
 D102 1-C
 D201 7-D
 D202 7-F

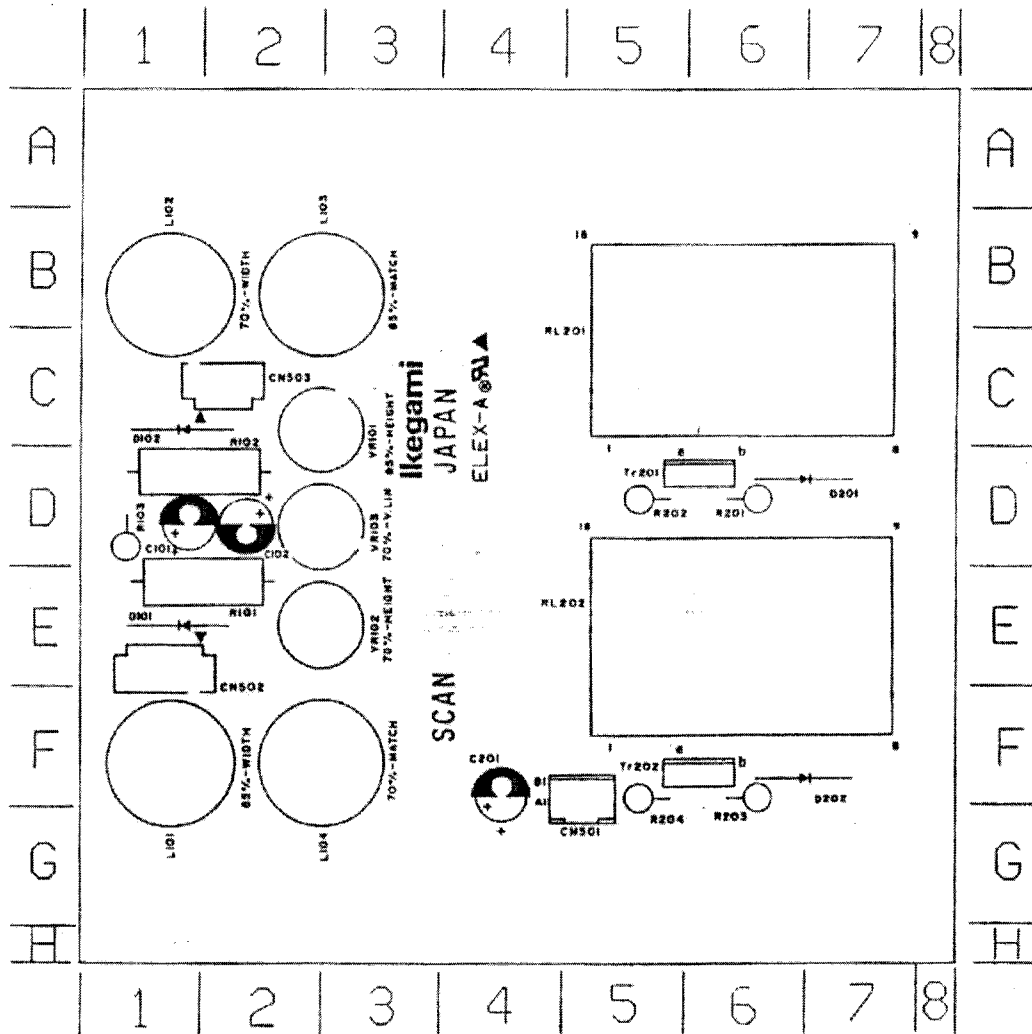

A SIDE

A side : Discrete parts are attached on the A side of the module.