



Configuring Internet Explorer 6.0

Network Camera

IPD-Q01

Network Encoder

IEN-T01

Network Recorder

INR-Q500

Operating Environment

- CPU: Intel Pentium® 4 2.0 GHz or more
- Memory: 256 MB or more (512 MB or more recommended)
- Operating System
 Microsoft® Windows® XP® Operating System
- Browser: Microsoft® Internet Explorer® 6.0

Intel and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Microsoft, Windows, and Internet Explorer are trademarks or registered trademarks of Microsoft Corporation or its subsidiaries in the United States and other countries.

In this manual, Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.


Configuring Internet Explorer 6.0 (1)

Internet Explorer 6.0 needs to be configured before you can access the Network Camera, Network Encoder and Network Recorder. Configure Internet Explorer 6.0 using the following procedure;

Click on the [Start] button, then [All Programs], then select [Internet Explorer].



After Internet Explorer is started, click on the [Tools] menu then select [Internet Options...].

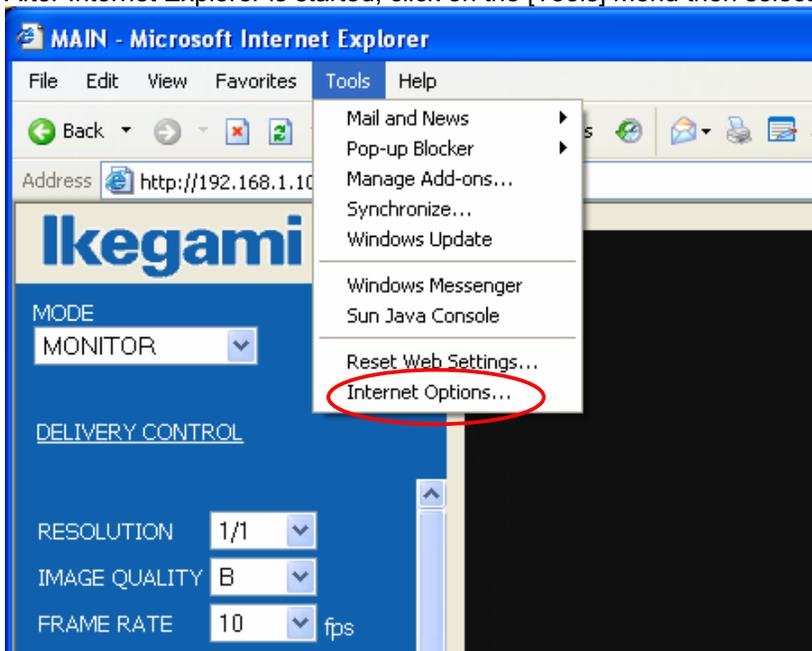

Configuring Internet Explorer 6.0 (2)

From the [Internet Options] window, click on the [Security] tab.


Select the [Internet] icon if you are accessing via the Internet or select the [Local intranet] icon if you are accessing through a LAN, then click on the [Custom Level...] button.

1. To access through the Internet

In the [Select a Web content zone to specify its security settings] field, click on the [Internet] icon. Next, click on the [Custom Level...] button.

2. To access through a LAN


In the [Select a Web content zone to specify its security settings] field, click on the [Local intranet] icon. Next, click on the [Custom Level...] button.

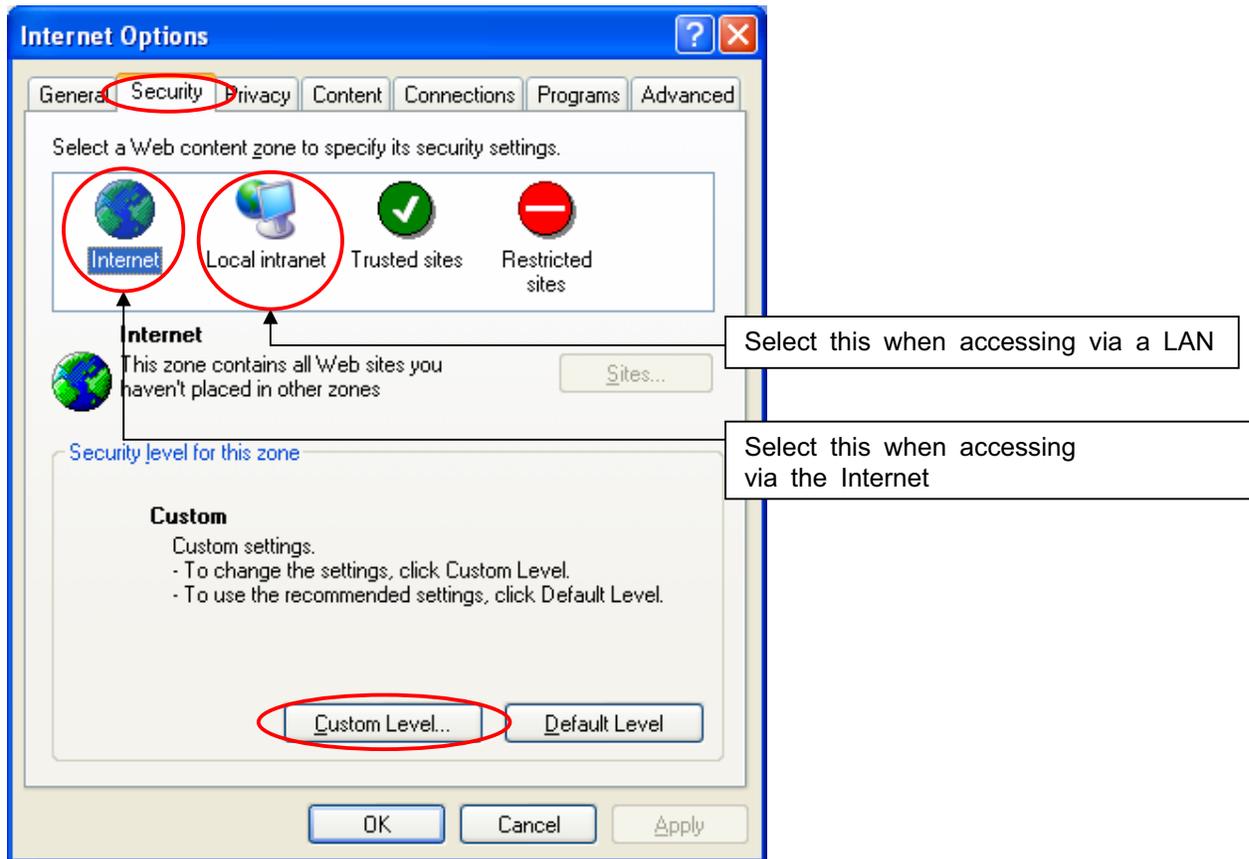


Configuring Internet Explorer 6.0 (3)

In the [Security Settings] window, if any of the following settings are set to "Disable", change it to either "Enable" or "Prompt."

[ActiveX controls and plug-ins]

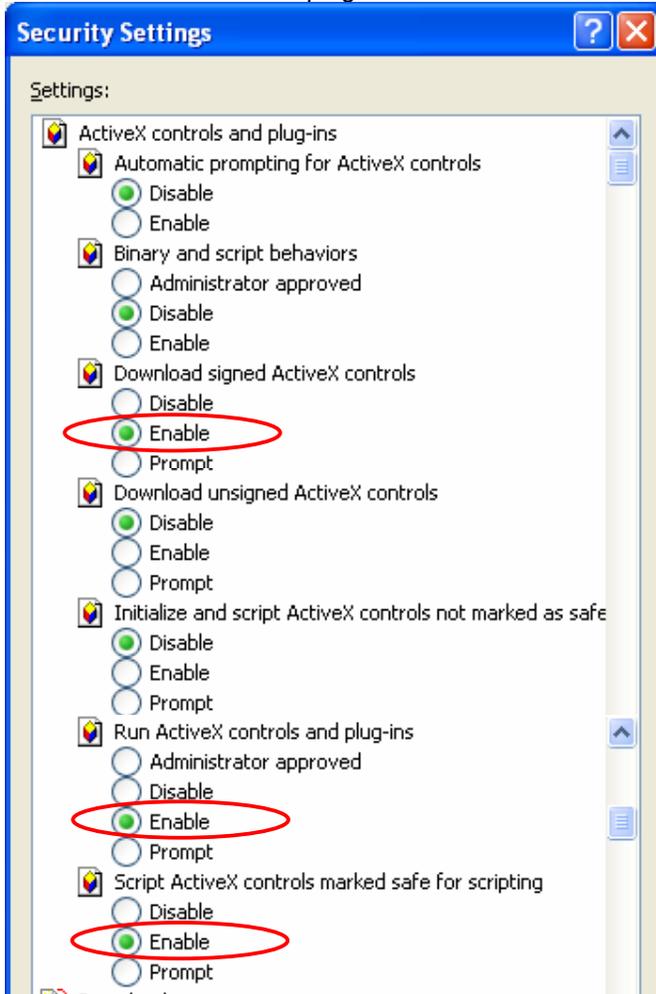



[Downloads]

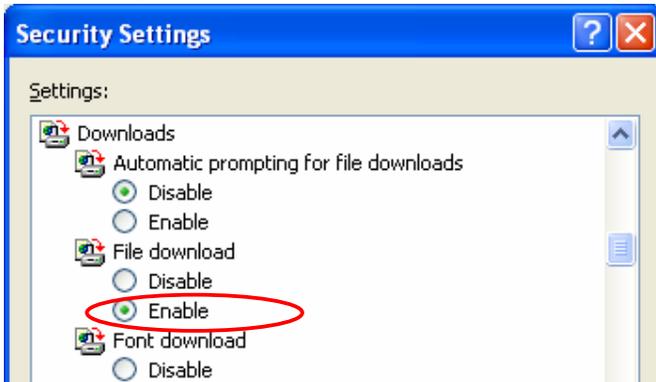


Configuring Internet Explorer 6.0 (4)

In the [Security Settings] window, if any of the following settings are set to "Disable", change it to either "Enable" or "Prompt."

[Miscellaneous]

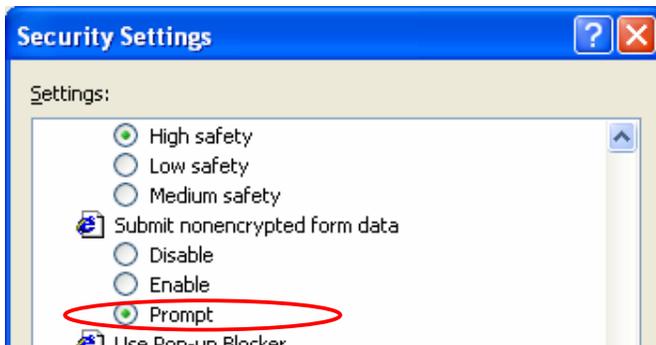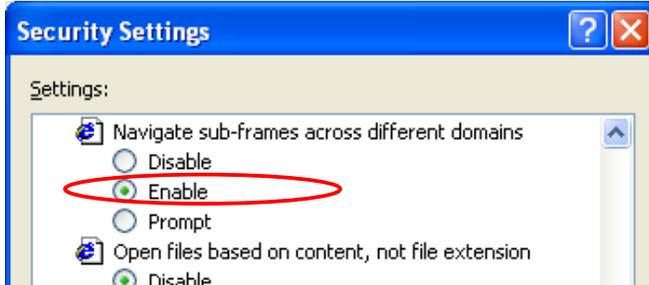

[Scripting]

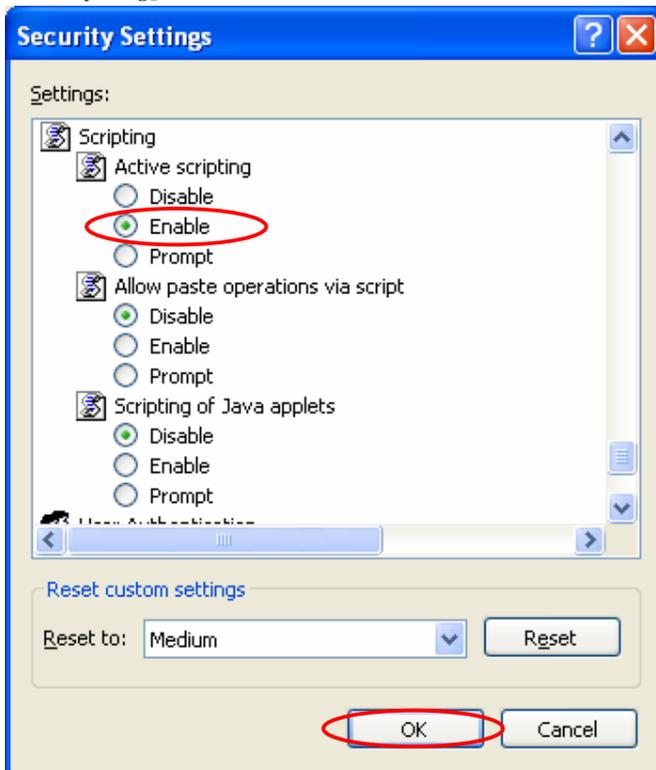


After completing the changes in the [Security Settings], click on the [OK] button.

Configuring Internet Explorer 6.0 (5)

Now, click on the [Advanced] tab to configure the advanced settings. Different options are displayed in this tab depending on the version of Internet Explorer, whether it is Internet Explorer 6.0 SP1 or Internet Explorer 6.0 SP2. Set up the options using the following procedure:

1. For Internet Explorer 6.0 SP1
Turn on the [Use SSL 3.0] checkbox under the [Security] section, then click on the [OK] button.
2. For Internet Explorer 6.0 SP2
Turn on the [Use SSL 3.0] and the [Allow active content to run in files on My Computer] checkboxes under the [Security] section, then click on the [OK] button.

Internet Explorer 6.0 SP2 [Advanced] window

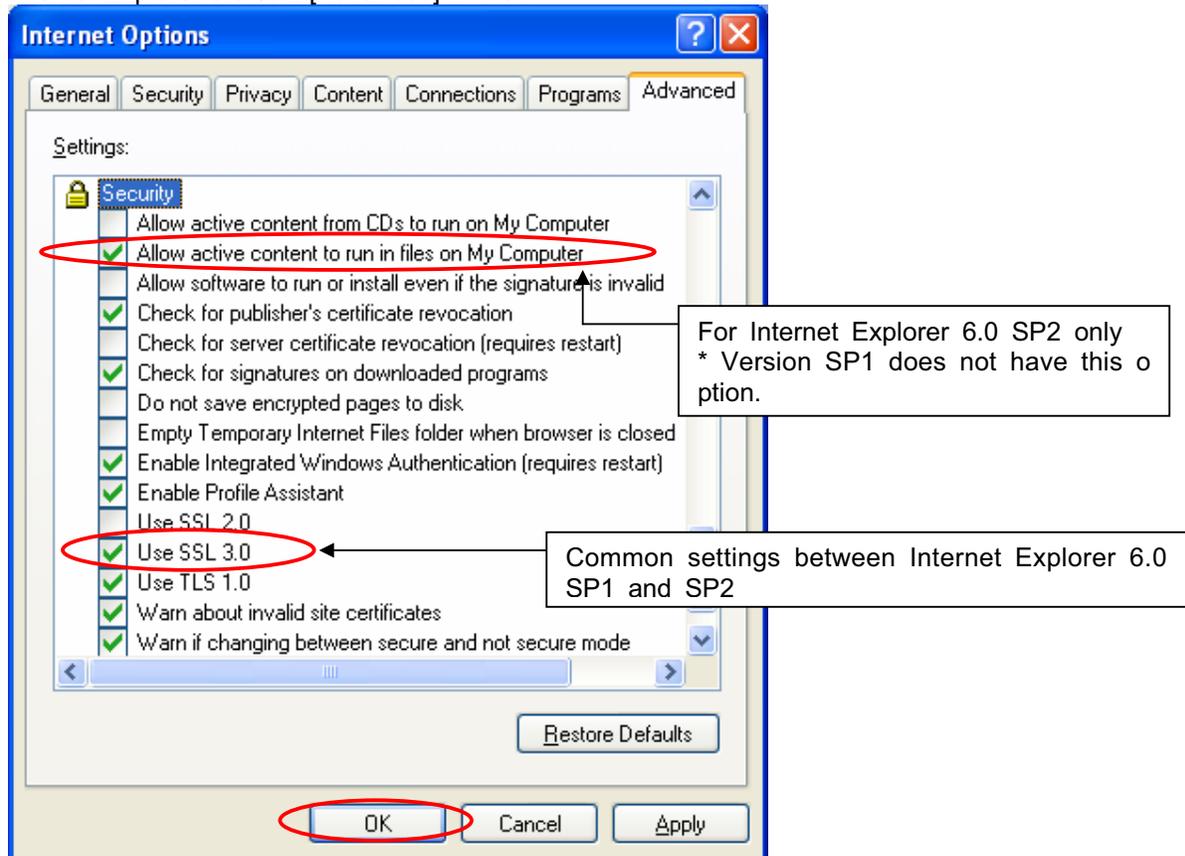

The Internet Explorer 6.0 settings have now been completed.
Internet Explorer is a registered trademark of Microsoft Corporation.

Ikegami

IKEGAMI ELECTRONICS (U. S. A.) INC, 37 Brook Avenue, Maywood, NJ07607
IKEGAMI ELECTRONICS (EUROPE) GMBH Ikegami Strassel, D-41460 Neuss, Germany

TEL : 201-368-9171
TEL : 02131-1230