

Ikegami®

12.1-inch Stand alone LCD Monitor

V-LCD12.1-SVGA




Our V-LCD12.1-SVGA is the monitor of choice for broadcasters, system integrators, and exhibition designers. This ruggedly constructed model has been used in numerous museum and exhibition applications, on the set for video production, in amusement parks, and even in department store product displays. V-LCD12.1-SVGA accepts NTSC/PAL composite video, S-Video, VGA, audio, and optional RF signals with a cable ready, 125-channel television tuner. The compact V-LCD12.1-SVGA has 18-bit color reproduction with 800 x 600 pixel resolution. This model has bright displays for installation in well-lighted exhibition areas, on the newscast set, or outdoors. System integrators choose this model for durability and installation flexibility since this unit can be factory or field configured for desktop, ceiling mounted, or wall mounted applications. The optional ceiling and wall mount brackets are constructed out of heavy gauge steel with a black powder coated finish. The ceiling mount allows the user to swivel and tilt the display 360° in any direction. V-LCD12.1-SVGA operates on 12VDC making them ideal for mobile broadcast, field production, and airborne applications. Universal 110 VAC to 220 VAC U.L. Class 2 power supply, remote control and users manual are included with each unit.

Wall mount



Ceiling mount

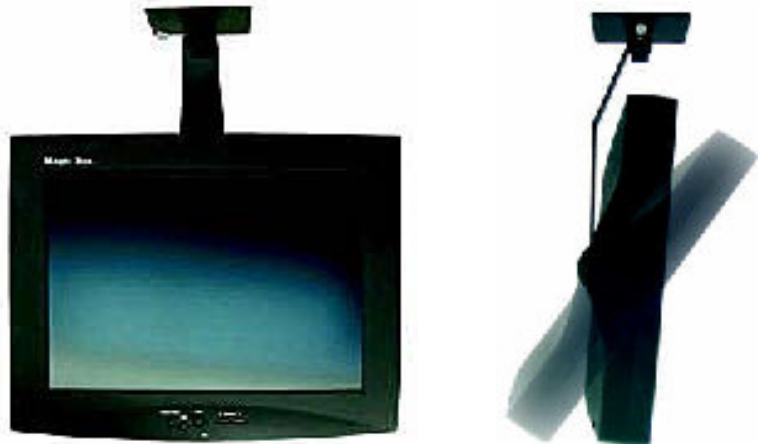

SPECIFICATIONS:

Viewing Area:	12.1 Inch diagonal	Video Input:	1 x Composite, 1 x SVGA
Aspect Ratio:	4 : 3		1 x S-Video
Pixels:	800 (H) x RGB x 600 (V)	Dimensions:	Width 11.50 Inch
Dot Pitch:	0.3075mm x 0.3075mm		Height 8.75 Inch
Display:	12.1" Megapixel TFT		Depth 1.25 Inch
Brightness:	250 cd		
Power Requirement:	12 VDC, 3.5 Amp.		

Design and specifications are subject to change without notice.

Ikegami Ikegami Electronics (U. S. A.) Inc.

URL <http://www.ikegami.com>

Headquarters	37 Brook Avenue, Maywood, New Jersey 07607 Phone 201-368-9171 Fax 201-569-1626
West Coast Office	2631 Manhattan Beach Blvd., Redondo Beach, CA 90278 Phone 310-297-1900 Fax 310-536-9550
Southwest Office	773 Bearden Waxahachie, TX 75167 Phone 972-869-2363 Fax 972-556-1057
Midwest Office	747 Church Road, Unit C1, Elmhurst, IL 60126 Phone 630-834-9774 Fax 630-834-8689
Southeast Office	5200 N.W. 33rd Ave. Suite 111, Ft. Lauderdale, FL 33309 Phone 954-735-2203 Fax 954-735-2227