


# Ikegami®

Three 5.6" LCD Monitors in 3 RU

## V-R563P

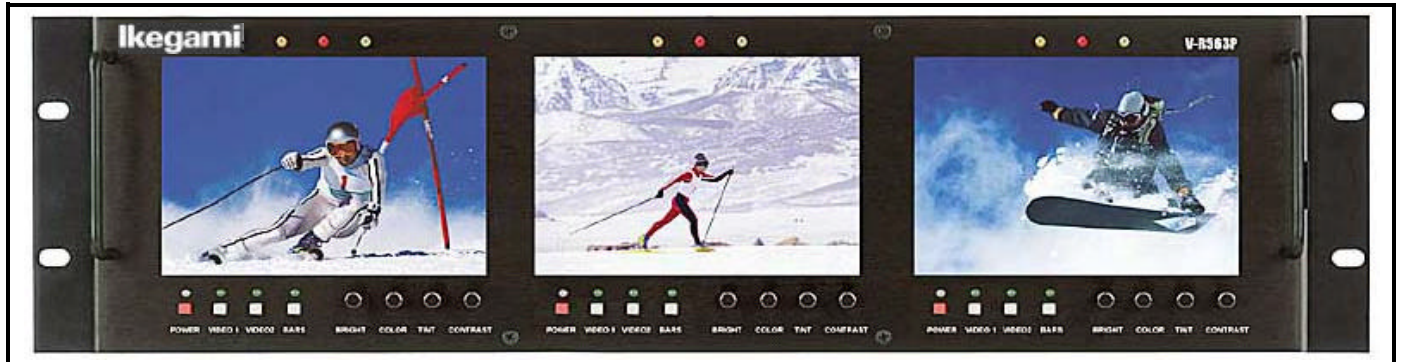

The V-R563P is a rack mounted unit that has three independently controlled 5.6" active matrix LCD panels with active loop through feature. These 5.6" panels have 960 x 234 pixels producing a true high resolution image. This unit also has a unique feature that allows the unit to tilt up or down for optimum viewing angle. The unit fits into an EIA standard 19" rack, 3U high. Each of the three screens has a built-in color bar generator, individual front mounted selector buttons with LED indicators and color, tint, brightness and contrast controls. Each screen has two composite video inputs and outputs, and 3 color tally system. The unit includes power supply and is available in either NTSC or PAL format.

### **■** SPECIFICATIONS:

Viewing Area:	4.46" (H) x 3.33" (V)	Video Input:	2 X Composite NTSC
Aspect Ratio:	4 : 3		
Pixels:	960 (H) x 234 (V)		
Dot Pitch:	0.118mm x 0.362mm	Dimensions:	Width 19.125 Inch
Display:	5.6" Active Matrix LCD		Height 5.14 Inch
Brightness:	350 cd		Depth 2.5 Inch
Power Requirement:	12 VDC, 2 Amp.		Weight 5 lbs.

Design and specifications are subject to change without notice.

**Ikegami** Ikegami Electronics ( U. S. A. ) Inc.

**■** URL <http://www.ikegami.com>

Headquarters	37 Brook Avenue, Maywood, New Jersey 07607 Phone 201-368-9171 Fax 201-569-1626
West Coast Office	2631 Manhattan Beach Blvd., Redondo Beach, CA 90278 Phone 310-297-1900 Fax 310-536-9550
Southwest Office	526 Bluebird Lane, Red Oak, TX 75154 Phone 972-869-2363 Fax 972-556-1057
Midwest Office	747 Church Road, Unit C1, Elmhurst, IL 60126 Phone 630-834-9774 Fax 630-834-8689
Southeast Office	5200 N.W. 33rd Ave. Suite 111, Ft. Lauderdale, FL 33309 Phone 954-735-2203 Fax 954-735-2227