


Ikegami®

7" wide 16:9 aspect SDI LCD Monitor

V-R70P-SDI

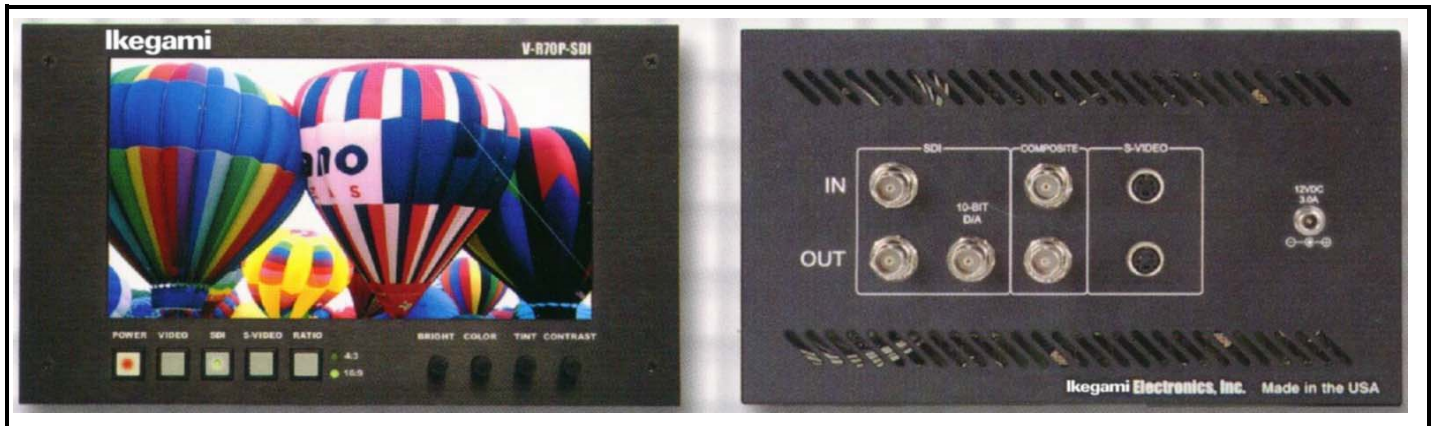

The V-R70P-SDI is the latest of the V-R Series from Ikegami Electronics. This unit is designed to work as a stand alone, camera or rack mounted monitor in a Leader or Tectronix Rackmount cradle. This unit can accommodate an SDI, composite video, or a S-Video signal with an active loophrough for each. In addition to the digital and analog loophroughs, this unit also has a 10-bit converted output from the digital input. It has front mounted buttons with LED's and controls for brightness, color, tint, and contrast. A Ratio button allows the unit to switch between 16:9 and 4:3 ratios. Its 10VDC-17VDC power requirements make it ideal for field use and it can be powered from an Anton Bauer or similar battery systems by using a special adaptor (V-RPA-XLR), and for convenience it has a standard 1/4-20 mount on the bottom of the unit. Like all the V-R Series, this unit is built out of steel and aluminum.

■ SPECIFICATIONS:

Viewing Area:	6.07" (H) x 3.41" (V)	Video Input:	1 Composite NTSC
Aspect Ratio:	16 : 9		1 S-video (Y + C)
Pixels:	1440 (H) x 234 (V)		1 Serial Didital Input
Dot Pitch:	0.11mm x 0.38mm		
Display:	7" wide LCD	Dimensions:	Width 8.25 Inch
Brightness:	400 cd		Height 5 Inch
Power Requirment:	10~17 VDC, 0.6 Amp.		Depth 1.4 Inch

Design and specifications are subject to change without notice.

0502JTLr1

Ikegami Ikegami Electronics (U. S. A.) Inc.

■ URL <http://www.ikegami.com>

Headquarters	37 Brook Avenue, Maywood, New Jersey 07607 Phone 201-368-9171 Fax 201-569-1626
West Coast Office	2631 Manhattan Beach Blvd., Redondo Beach, CA 90278 Phone 310-297-1900 Fax 310-536-9550
Southwest Office	526 Bluebird Lane, Red Oak, TX 75154 Phone 972-869-2363 Fax 972-556-1057
Midwest Office	747 Church Road, Unit C1, Elmhurst, IL 60126 Phone 630-834-9774 Fax 630-834-8689
Southeast Office	5200 N.W. 33rd Ave. Suite 111, Ft. Lauderdale, FL 33309 Phone 954-735-2203 Fax 954-735-2227