


Ikegami®

7" wide 16:9 aspect SDI LCD Monitor

V-R71PA-SDI

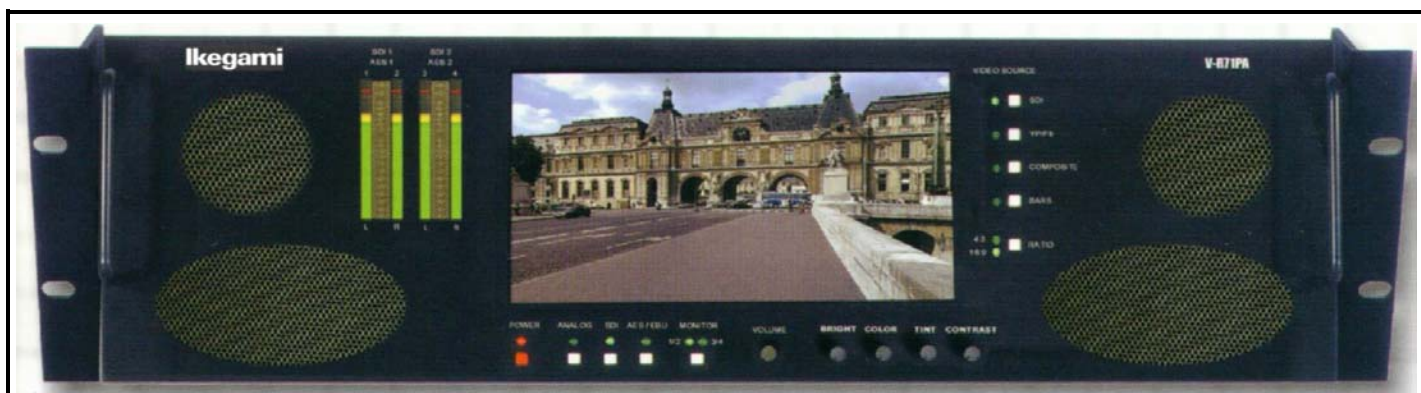

At just 3 rack spaces high, the V-R71PA-SDI is loaded with features and Flexibility. This unit accepts SDI, component, and composite video sources with loop through in a 16:9 or 4:3 ratio. Two stereo pairs of audio may be inputted via 1 SDI embedded, or 2 AES / EBU, or 4 balanced XLR inputs. Simultaneous visual monitoring of up to 4 audio channels is obtained using a high-resolution LED bar graph, while one selectable pair of audio is monitored via the full range stereo speakers. Using a new revolutionary Class D, all digital power amplifier, the V-R71PA-SDI delivers 5 watts per channel of high fidelity audio, but produces virtually zero heat. Other features include NTSC/PAL auto recognition, a color bar generator, controls for volume, color, tint, contrast and brightness. Unit comes complete with power supply and owners manual.

■ SPECIFICATIONS:

Viewing Area:	6.07" (H) x 3.41" (V)	Video Input:	1 Composite NTSC
Aspect Ratio:	16 : 9		1 YPrPb component
Pixels:	1440 (H) x 234 (V)		1 Serial Digital Input
Dot Pitch:	0.11mm x 0.38mm	Audio Input	4 Analog, 2 AES, 2 SDI
Display:	7" wide LCD	Dimensions:	Width 19,12 Inch
Brightness:	400 cd		Height 5.14 Inch
Power Requirement:	12 VDC, 4 Amp.		Depth 2.65 Inch

Design and specifications are subject to change without notice.

0502JTLr1

Ikegami Ikegami Electronics (U. S. A.) Inc.

■ URL <http://www.ikegami.com>

Headquarters	37 Brook Avenue, Maywood, New Jersey 07607 Phone 201-368-9171 Fax 201-569-1626
West Coast Office	2631 Manhattan Beach Blvd., Redondo Beach, CA 90278 Phone 310-297-1900 Fax 310-536-9550
Southwest Office	526 Bluebird Lane, Red Oak, TX 75154 Phone 972-869-2363 Fax 972-556-1057
Midwest Office	747 Church Road, Unit C1, Elmhurst, IL 60126 Phone 630-834-9774 Fax 630-834-8689
Southeast Office	5200 N.W. 33rd Ave. Suite 111, Ft. Lauderdale, FL 33309 Phone 954-735-2203 Fax 954-735-2227