


# Ikegami®

Dual 7" wide 16:9 aspect LCD Monitor  
with built in router and sequential switcher

## V-R72P

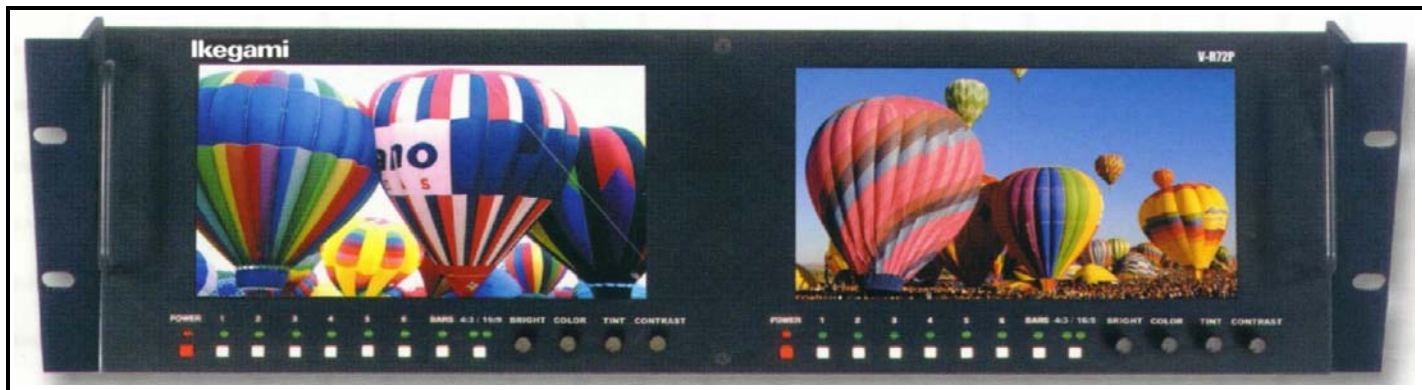

The V-R72P is a rack mountable unit that has two 7" 16:9 active matrix LCD panels with NTSC / PAL auto recognition. These panels have 1440 x 234 pixels making them a true high resolution LCD panel. The unit has a 6 x 2 router and sequential switcher with loop through capability. The two program outputs route the signal appearing on the screen to another monitor. Any of the six channels can appear on one or both of the monitors simultaneously. The unit fits into an EIA standard 19" rack, three rack spaces high. Each of the screens can switch between 16:9 and 4:3 aspect ratios and has a built-in color bar generator, individual front selector buttons with LED's and color, tint, brightness and contrast controls. Unit comes with power supply and instructions

### ■ SPECIFICATIONS:

Viewing Area:	6.07" (H) x 3.41" (V)	Video Input:	6 Composite NTSC
Aspect Ratio:	16 : 9		
Pixels:	1440 (H) x 234 (V)		
Dot Pitch:	0.11mm x 0.38mm	Dimensions:	Width 19.125 Inch
Display:	7" wide active matrix LCD		Height 5.14 Inch
Brightness:	300 cd		Depth 2.5 Inch
Power Requirement:	12 VDC, 2 Amp.		Weight 5 lbs.

Design and specifications are subject to change without notice.

0502JTLr1

**Ikegami** Ikegami Electronics ( U. S. A. ) Inc.

■ URL <http://www.ikegami.com>

Headquarters	37 Brook Avenue, Maywood, New Jersey 07607 Phone 201-368-9171 Fax 201-569-1626
West Coast Office	2631 Manhattan Beach Blvd., Redondo Beach, CA 90278 Phone 310-297-1900 Fax 310-536-9550
Southwest Office	526 Bluebird Lane, Red Oak, TX 75154 Phone 972-869-2363 Fax 972-556-1057
Midwest Office	747 Church Road, Unit C1, Elmhurst, IL 60126 Phone 630-834-9774 Fax 630-834-8689
Southeast Office	5200 N.W. 33rd Ave. Suite 111, Ft. Lauderdale, FL 33309 Phone 954-735-2203 Fax 954-735-2227