

HLM-2610W 26-inch HDTV/SDTV Multi-format LCD Color Monitor

RoHS

High-End Broadcast LCD Monitor



The HLM-2610W employs a 26-inch LCD panel in WXGA (1366×768) with wide critical viewing angle, excellent brightness and contrast, fast response time, and faithful color reproduction. It provides HDTV/SDTV multi-format SDI and VBS inputs as standard and achieves space-saving, light weight, and low power consumption.

26-inch Wide	WXGA (1366×768 pixel)	Viewing Angle 178degree(H/V)	Contrast Ratio 900:1	106W				
VBS Input	Y, P, P _b , P _r /RGB Input	HD/SD-SDI Input	Embedded AES/EBU Output	Embedded Analog Audio Output	Embedded Audio Meter	PC Picture Input	Analog Audio Input	
4:3/16:9	Remote (Parallel)	Remote (Serial)	Remote (Infrared rays)	Marker	Shadow	Test Signal Generator	10-Color temperature-memory	
Speaker	VITC Display	WFM Monitoring Display	Split Screen	Dot-by-Dot Display				
W650×H420×D110mm (W25.6×H16.6×D4.4 inches)		14.6 kg (32.19lbs)						

HLM-1711WR 17-inch HDTV/SDTV Multi-format LCD Color Monitor


RoHS

High-End Broadcast LCD Monitor



The HLM-1711WR employs a 17-inch LCD panel in WXGA (1280×768) with wide critical viewing angle, excellent brightness and contrast, fast response time, and faithful color reproduction. It provides HDTV/SDTV multi-format SDI and VBS inputs as standard and achieves space-saving, light weight, and low power consumption.

17-inch Wide	WXGA (1280×768 pixel)	Viewing Angle 170degree(H/V)	Contrast Ratio 800:1	50W				
VBS Input	Y, P, P _b , P _r /RGB Input	HD/SD-SDI Input	Embedded AES/EBU Output	Embedded Analog Audio Output	Embedded Audio Meter	PC Picture Input	Analog Audio Input	
4:3/16:9	Remote (Parallel)	Remote (Serial)	Remote (Infrared rays)	Marker	Shadow	Test Signal Generator	10-Color temperature-memory	
Speaker	VITC Display	WFM Monitoring Display	Split Screen	Dot-by-Dot Display				
W428×H305×D80mm (W16.9×H12.0×D3.1 inches)		7RU	7.5kg (16.53 lbs)					

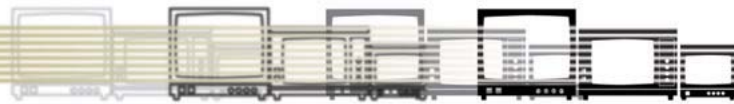

HLM-1510R 15-inch HDTV/SDTV Multi-format LCD Color Monitor

RoHS

High-End Broadcast LCD Monitor



The HLM-1510R employs a 15-inch LCD panel and achieves space-saving, light weight, and low power consumption, providing HDTV/SDTV multi-format SDI and VBS inputs as standard.

It is designed with a compact size of 6RU height, specifically suitable to replace an existing 14-inch CRT monitor without changing rack layout.

15-inch	XGA (1024×768 pixel)	Viewing Angle 170degree(H/V)	Contrast Ratio 700:1	38W	
VBS Input	Y, P _s , P _r /RGB Input ▲	HD/SD-SDI Input	Embedded AES/EBU Output ▲	Embedded Analog Audio Output ▲	Embedded Audio Meter ▲
PC Picture Input ▲	Analog Audio Input				
4:3/16:9	Remote (Parallel)	Remote (Serial)	Remote (Infrared rays)	Marker	Shadow
Test Signal Generator	10-Color temperature-memory	Speaker	VITC Display	WFM Monitoring Display	Split Screen
Dot-by-Dot Display					
W370×266×75mm (W14.6×10.5×3.0inches)	6RU	5.8kg (12.79 lbs)			

HLM-1510V 15-inch HDTV/SDTV Multi-format LCD Color Monitor

RoHS

High-End Broadcast LCD Monitor



The HLM-1510V employs a 15-inch LCD panel and achieves space-saving, light weight, and low power consumption, providing HDTV/SDTV multi-format SDI and VBS inputs as standard.


It can be mounted in various locations such as on desks, monitor wall, etc.

15-inch	XGA (1024×768 pixel)	Viewing Angle 170degree(H/V)	Contrast Ratio 700:1	38W	
VBS Input	Y, P _s , P _r /RGB Input ▲	HD/SD-SDI Input	Embedded AES/EBU Output ▲	Embedded Analog Audio Output ▲	Embedded Audio Meter ▲
PC Picture Input ▲					
4:3/16:9	Remote (Parallel)	Remote (Serial)	Remote (Infrared rays)	Marker	Shadow
Test Signal Generator	10-Color temperature-memory	Speaker	VITC Display	WFM Monitoring Display	Split Screen
Dot-by-Dot Display					
W340×295×75mm (W13.4×11.6×3.0inches)	5.9kg (13.01 lbs)				

Evolutional Feature for HLM-2610W, HLM-1711WR, HLM-1510R/V Multi-format LCD Monitor

● Variety of Input/Output

(1) Multi-format HD/SD-SDI (4:2:2) inputs 2ch, 1ch monitor out follows channel selection.

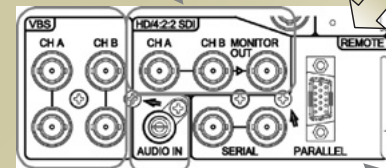


(2) VBS inputs: 2ch each with loop through, NTSC/PAL auto detect.

(3) Analog Audio Input: Audio monitoring is available with the built-in speaker.

(4) Remote Control Interface: serial remote signal input and parallel remote signal input.

In case of HLM-1711WR

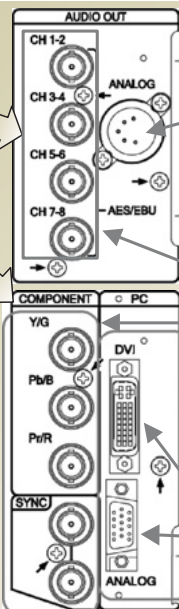

(5) [Factory Option] EA-171/261DML Audio Demux module with EA-900A provides 2 channels of analog embedded audio outputs.

• The output channels can be chosen by menu among ch1/2, 3/4, 5/6, 7/8.

• The audio can also output to the front speaker.
* note that EA-900A cannot co-reside with EA-900D digital output.

(6) [Factory Option] EA-171/261DML Audio Demux module with EA-900D provides 8 channels of AES/EBU digital embedded audio outputs.


The audio can also output to the front speaker.
* note that EA-900D cannot co-reside with EA-900A analog output.

(7) [Factory Option] CM-171 module provides either Y, Pb, Pr or RGB input and EXT Sync input.
* it cannot co-reside with PC-171.

(8) [Factory Option] PC-171 module provides analog RGB and DVI-D input. (VGA/SVGA/XGA/WXGA)
* it cannot co-reside with CM-171.


● Versatile functions

(1) With the EA-171/261DML Audio Demux module (Factory option)
• Level meters for 8 channels of embedded audio can be superimposed over the video, providing space and cost savings for monitoring the video and the audio at the same time.
• The contrast, position, and indicating channels can be set by menu.
• Auto detect multi-format HD/SD-SDI input
• Embedded audio can be monitored with the built-in speaker

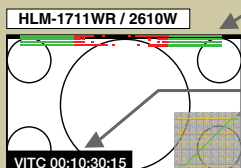


(2) WFM monitoring and VITC Time Code display function

- Waveform can be displayed for the input signal
- HD-SDI signal with VITC display is available
- Employing a 4:3 aspect LCD panel for HLM-1510R/V, Waveform and VITC Time Code can be displayed on the blanking area by shifting the 16:9 picture image to the upper side.

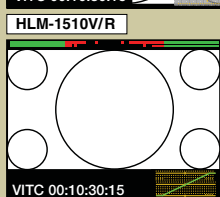


(3) Internal test signals

- 100% WINDOW signal
- Grayscale test signal
- ARIB(STD-B28) color bars

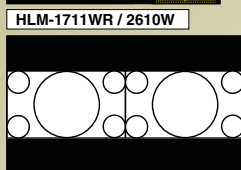


(4) Marker Display

- Various safety markers and Cross hatch
- Various area markers with Shadow functions

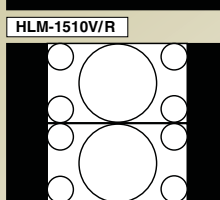

(5) Split screen mode


- This function allows for comparing a captured still image and a camera live image.
- In case of the HLM-1510R/V, the split screen can be displayed on right and left or top and bottom.

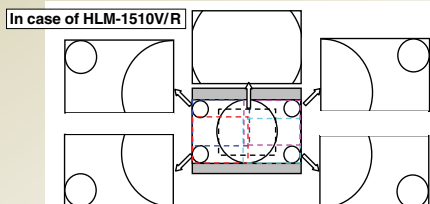

(6) Dot-by-Dot display
• This function for 1:1 scan without scaling

● Multiple Monitor Control


In case of HLM-1711WR

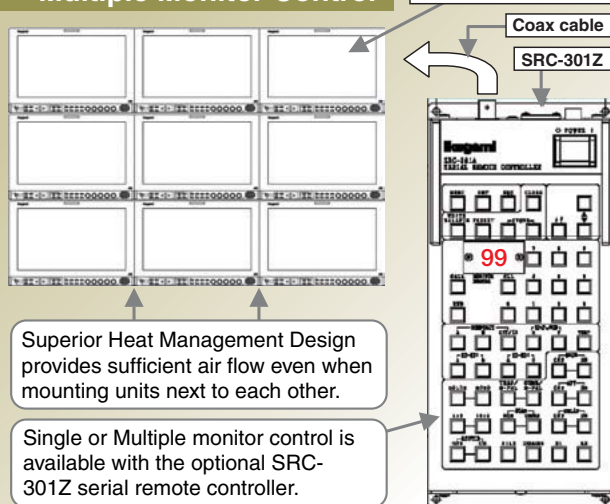

Superior Heat Management Design provides sufficient air flow even when mounting units next to each other.

Single or Multiple monitor control is available with the optional SRC-301Z serial remote controller.

● The most suitable for rack mounting

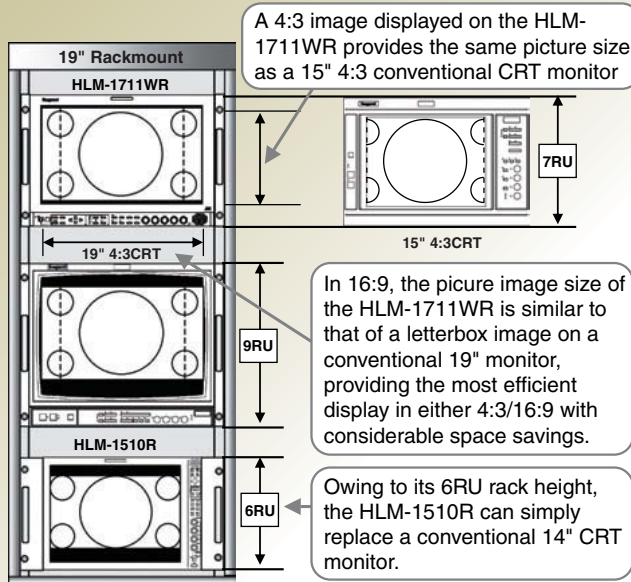



Optional Accessories for HLM-series Monitors

For HLM-2610W, HLM-1711WR, HLM-1510R/V

Model	Description	Remarks
EA-900A	Embedded Audio Analog Output Module	XLR-5 pin, 2ch Embedded Analog Audio Outputs, EA-171/261DML required (*Factory Option)
EA-900D	Embedded AES/EBU Output Module	BNC, 8ch Embedded AES/EBU Outputs, EA-171/261DML required (*Factory Option)
CM-171	Analog component Input Module	1ch Y, P _s , P _r or RGB Input, 1ch loop through EXT SYNC, cannot co-reside with PC-171 (*Factory Option)
PC-171	PC Input Module	1ch PC Analog RGB, 1ch DVI-D, cannot co-reside with CM-171 (*Factory Option)
RCT-30A	Infrared Remote Controller	
SRC-301Z	Serial Remote Controller	Controls up to 99 monitors with loop through connection

For HLM-1711WR, HLM-1510R/V

Model	Description	Remarks
EA-171DML	Audio Demux Module with Audio Level Meters	Embedded Audio Output, 8ch Audio Level Meters (*Factory Option)
STD-1517	Stand	
STD-1517T	Stand with tilt mechanism	Tilt : up 15° / down 15°
STD-1722	VESA Arm Stand	VM-1510R/V required for HLM-1510R/V

For HLM-2610W only

Model	Description	Remarks
EA-261DML	Audio Demux Module with Audio Level Meters	Embedded Audio Output, 8ch Audio Level Meters (*Factory Option)
VM-2610	VESA Mount Adapter	for VESA mount

For HLM-1711WR only

Model	Description	Remarks
RS-1710	19-inch Rackmount Adapter	Fixed type, 7U high
RS-1710T	19-inch Rackmount Adapter	4-step angle, 7U high

For HLM-1510R only

Model	Description	Remarks
VM-1510R	VESA Mount Adapter	for VESA mount
RS-1510	19-inch Rackmount Adapter	Fixed type, 6U high

For HLM-1510V only

Model	Description	Remarks
VM-1510V	VESA Mount Adapter	for VESA mount



RS-1710T

HLM-1711WR

19-inch Rack-mount Adaptor



RS-1510

HLM-1510R

19-inch Rack-mount Adaptor



STD-1722

HLM-1711WR, 1510R/V
VESA Arm Stand



STD-1517

HLM-1711WR, 1510R/V
Stand



STD-1517T

HLM-1711WR, 1510R/V
Stand with tilt mechanism



VM-1510R

HLM-1510R

VESA Mount Adaptor



VM-1510V

HLM-1510V

VESA Mount Adaptor




SRC-301Z

Serial Remote Controller



RCT-30A

Infrared Remote Controller

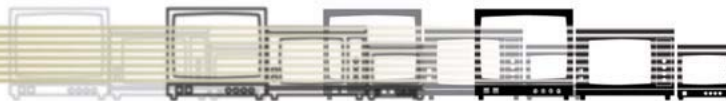

HLM-920WR 9-inch HDTV/SDTV Multi-format LCD Color Monitor

RoHS

High-End Broadcast LCD Monitor



The HLM-920WR employs a 9-inch wide screen LCD panel, with HDTV/SDTV multi-format SDI and VBS inputs as standard.

It achieves compact, light weight, low power consumption, and also rack mountable in a 2-monitor configuration, suitable for use in all kinds of locations such as monitor wall, OB truck, etc.

9-inch Wide	WVGA (800×480 pixel)	Viewing Angle 170degree(H/V)	Contrast Ratio 350:1	26W
VBS Input	Y, P _b , P _r /RGB Input	HD/SD-SDI Input	Embedded AES/EBU Output	Embedded Analog Audio Output
4:3/16:9	Remote (Parallel)	Remote (Serial)	Marker	Shadow
Speaker	VITC Display	WFM Monitoring Display	Split Screen	Dot-by-Dot Display
221×173×130.5mm (8.4×6.9×5.1 inches)	4RU	2.2kg (4.85lbs)		

HLM-920WP 9-inch HDTV/SDTV Multi-format LCD Color Monitor

RoHS


High-End Broadcast LCD Monitor




The HLM-920WP employs a 9-inch wide screen LCD panel, with HDTV/SDTV multi-format SDI and VBS inputs as standard. It achieves compact, light weight, low power consumption, specifically suitable for field use with DC input and for battery operation with V-mount or Anton Bauer mount.

9-inch Wide	WVGA (800×480 pixel)	Viewing Angle 170degree(H/V)	Contrast Ratio 350:1
AC:27W DC:21W	AC Input	DC Input	Battery
VBS Input	Y, P _b , P _r /RGB Input	HD/SD-SDI Input	Embedded AES/EBU Output
Embedded Analog Audio Output	Embedded Analog Audio Meter	Analog Audio Input	
4:3/16:9	Remote (Parallel)	Remote (Serial)	Marker
Shadow	Test Signal Generator	10-Color temperature-memory	Speaker
VITC Display	WFM Monitoring Display	Split Screen	Dot-by-Dot Display
221×173×123mm (8.4×6.9×4.9 inches)	4RU	2.3kg (5.07lbs)	

High-End Broadcast LCD Monitor

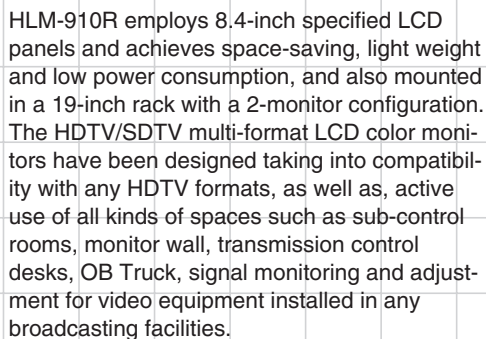[illegible]

High-End Broadcast LCD Monitor

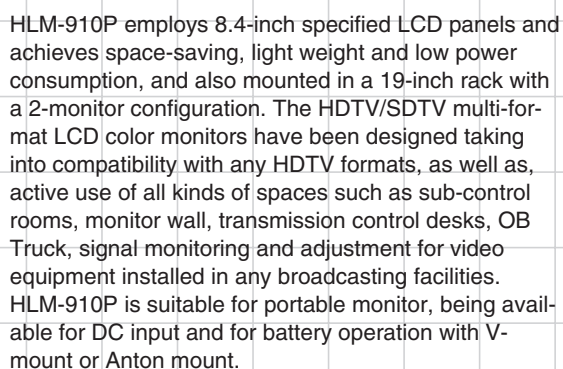

8.4-inch	XGA (1024×768 pixel)	Viewing Angle 170degree(H/V)	Contrast Ratio 400:1	AC:27W DC:23W	AC Input	DC Input	Battery
VBS Input	Y,P,B, RGB Input	HD/SD-SDI Input	Embedded AES/EBU Output	Embedded Analog Audio Output	Embedded Audio Meter	Analog Audio Iutput	
4:3/16:9	Remote (Parallel)	Remote (Serial)	Marker	Shadow	Test Signal Generator	10-Color temperature-memory	Speaker
							VITC Display
							WFM Monitoring Display
W216×H176×D99mm (*8.5×6.9×3.9 inches)			4RU				
2.1kg (4.63lbs)							

Evolutional Feature for HLM-910R/P, HLM-920WR/WP Multi-format LCD Monitors

●Versatile Interface

(1) VBS inputs:
2ch, each with
loop through,
NTSC/PAL auto
detect.

(2) Multi-format
HD/SD-SDI
(4:2:2) inputs:
2ch, 1ch monitor
output, follows
channel
selection.




(3) [Factory Option] EA-920DML Audio Demux module with level meter function + EA-900D provides 8-ch of AES/EBU digital embedded audio outputs.
•The audio can also output to the front speaker.
•8-ch audio level meters can be superimposed over the video.
*Note that the EA-900D cannot co-reside with EA-900A analog output.

(4) [Factory Option] CM-900 module provides Y,P_b,P_r/RGB and external sync inputs.
*The CM-900 cannot co-reside with the embedded audio options.



(5) Remote control interface:
Serial remote signal input
and Parallel remote signal
input.

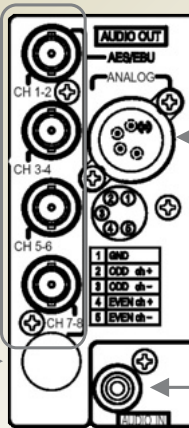


(6) [Factory Option] EA-920DML Audio Demux module with EA-900A provides 2 channels of analog embedded audio outputs.
•The output channels can be chosen by menu among ch1/2, 3/4, 5/6, 7/8.
•The audio can also output to the front speaker.
*note that EA-900A cannot co-reside with EA-900D digital output.

(7) Analog Audio input:
The audio signal outputs to the front speaker for audio monitoring.

●Versatile Functions

(1)With the EA-920DML Audio Demux module (Factory option)
•Level meters for 8 channels of embedded audio can be superimposed over the video, providing space and cost savings for monitoring the video and the audio at the same time.
•The contrast, position, and indicating channels can be set by menu.
•Auto detect multi-format HD/SD-SDI input
•Embedded audio can be monitored with the built-in speaker
•Either EA-900A or EA-900D is available for embedded audio outputs

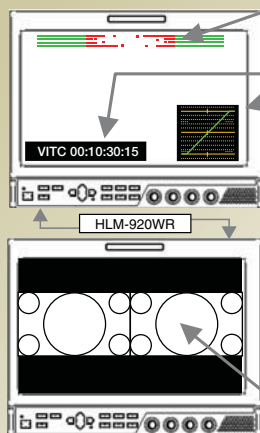

(2)WFM monitoring and VITC Time Code display function
•Waveform can be displayed for the input signal
•HD-SDI signal with VITC Time Code display is available
*Factory order option for HLM-910R/P.


(3)Internal test signals
•100% WINDOW signal
•Grayscale test signal
•ARIB(STD-B28) color bars

(4)Marker Display
•Various safety markers and Cross hatch
•Various area markers with Shadow functions

(6)Dot-by-Dot display
•This function for 1:1 scan without scaling
*available only for HLM-920WR/WP

(5)Split screen mode
•This function allows for comparing a captured still image and a camera live image.
*available only for HLM-920WR/WP

●Multiple Monitor Control

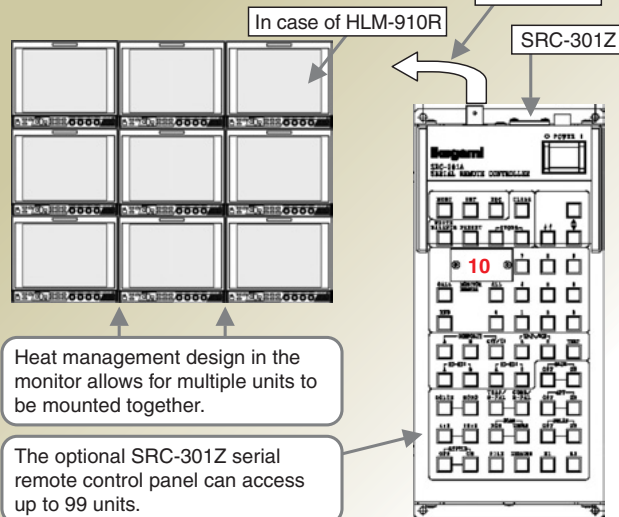


Heat management design in the monitor allows for multiple units to be mounted together.


The optional SRC-301Z serial remote control panel can access up to 99 units.

●Two models are available


(1) HLM-910R/920WR:
• Designed for rack mount applications.
• AC power supply is integrated for simple and clean installation.
• 100 to 120 VAC or 200 to 240 VAC.

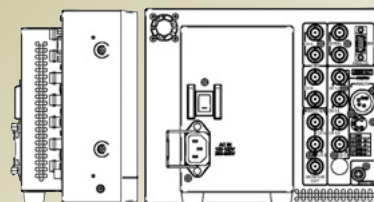

(2) HLM-910P/920WP:
• Portable design for field applications
• Battery operation
• AC operation is possible with XLR-4 plug, 12VDC power supply.

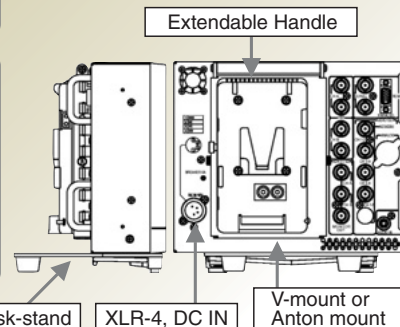


●Rack mounting saves space

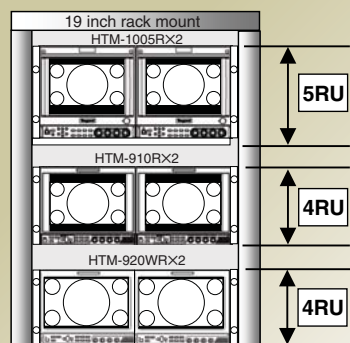

Designed for a compact size of 4RU high, the HLM-910R/HLM-920WR can maintain almost the same picture size as a conventional 10-inch CRT monitor.

HLM Series

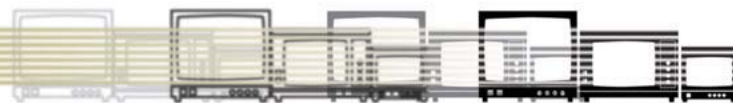

Optional Accessories for HLM-series Monitors

For HLM-920WR/920WP/910R/910P

Model	Description	Remarks
EA-920DML	Audio Demux Module with Audio Level Meters	Embedded Audio Output, 8ch Audio Level Meters (*Factory Option)
EA-900A	Embedded Audio Analog Outputs Module	XLR-5 pin, 2ch Embedded Analog Audio Outputs, EA-920DML required (*Factory Option)
EA-900D	Embedded AES/EBU Outputs Module	BNC, 8ch Embedded AES/EBU Outputs, EA-920DML required (*Factory Option)
CM-900	Analog component Input Module	1ch Y, Pb, Pr/RGB Input, 1ch EXT SYNC loop through, cannot co-reside with the embedded audio options (*Factory Option)
SRC-301Z	Serial Remote Controller	Controls up to 99 monitors with roop through connection
STD-900	Stand	(Standard for HLM-920WP/910P)
STD-920T	Tilt Stand	Tilt : max. 20°
AT-900	Tripod Mount Plate	1/4 & 3/8 inch hole plate

For HLM-920WR/920WP

Model	Description	Remarks
DR-920	Dual Rackmount Adapter	
BP-920	Blank Panel for DR-920	

For HLM-920WR

Model	Description	Remarks
WR-920L	WFM Rackmount Adapter	for HLM-920WR+Leader LV5750, 4U high
WR-920L2	WFM Rackmount Adapter	for HLM-920WR+Leader LV5700A/5710A, 4U high
WR-920C	WFM Rackmount Adapter	for HLM-920WR+Tektronics WFM700-series, 4U high
GR-900	Handle	

For HLM-920WP

Model	Description	Remarks
MH-920	Collapsible Hood	
CC-920	Hard Carrying Case	
SC-920	Soft Carrying Case	

For HLM-910R/910P

Model	Description	Remarks
DR-910	Dual Rackmount Adapter	
BP-900	Blank Panel for DR-910	
WF-910	VITC & WFM Display function	(*Factory Option)

For HLM-910R

Model	Description	Remarks
WR-900L	WFM Rackmount Adapter	for HLM-910R+Leader LV5750, 4U high
WR-900L2	WFM Rackmount Adapter	for HLM-910R+Leader LV5700A/5710A, 4U high
WR-900C	WFM Rackmount Adapter	for HLM-910R+Tektronics WFM700-series, 4U high
GR-900	Handle	

For HLM-910P

Model	Description	Remarks
MH-900	Collapsible Hood	
CC-900	Hard Carrying Case	
SC-900	Soft Carrying Case	



STD-900
Stand



STD-920T
Tilt Stand



DR-910
HLM-910R/910P
Dual Rack-mount Adaptor



BP-900
HLM-910R/910P
Blank Panel for DR-910



WR-900L
HLM-910R
WFM Rack-mount Adaptor



MH-900
HLM-910P
Collapsible Hood



CC-900
HLM-910P
Hard Carrying Case



GR-900
HLM-920WR/910R
Handle



SC-900
HLM-910P
Soft Carrying Case



DR-920
HLM-920WR/920WP
Dual Rack-mount Adaptor

HLM Series Specifications

		Display Size (Viewing Area)	Rack-mountable Space	Resolution Number of Pixel (Max Brightness)	Input Signal						DC Input	Tally		Power Consumption	Dimensions mm (inch)	Weight kg (lbs)	Feature	
					VBS	Y, P _b , P _r /RGB	Y/C	HD/SD-SDI	PC Picture Input	Embedded Audio		R	G				•	•
HLM-2610W		26" Wide	/	1366 × 768	○ 2	△ 1	×	○ 2	△ 1	△ 2	○ 1	×	○	○	106 W	W650 (25.6) × H420 (16.6) × D110 (4.4)	14.6kg (32.19 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50
HLM-1711WR		17" Wide	7RU	1280 × 768	○ 2	△ 1	×	○ 2	△ 1	△ 2	○ 1	×	○	○	50W	W428 (16.9) × H305 (12.0) × D80 (3.1)	7.5kg (16.53 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50
HLM-1510R		15"	6RU	1024 × 768	○ 2	△ 1	×	○ 2	△ 1	△ 2	○ 1	×	○	○	38W	W370 (14.6) × H266 (10.5) × D75 (3.0)	5.8kg (12.79 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50
HLM-1510V		15"	/	1024 × 768	○ 2	△ 1	×	○ 2	△ 1	△ 2	○ 1	×	○	○	38W	W340 (13.4) × H295 (11.6) × D75 (3.0)	5.9kg (13.01 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50
HLM-920WR		9" Wide	4RU	800 × 480	○ 2	△ 1	×	○ 2	×	△ 2	○ 1	×	○	○	26W	W221 (8.4) × H173 (6.9) × D130.5 (5.1)	2.2kg (4.85 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50
HLM-920WP		9" Wide	4RU	800 × 480	○ 2	△ 1	×	○ 2	×	△ 2	○ 1	○	○	○	AC 27W DC 21W	W221 (8.4) × H173 (6.9) × D123 (4.9)	2.3kg (5.07 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50
HLM-910R		8.4"	4RU	1024 × 768	○ 2	△ 1	×	○ 2	×	△ 2	○ 1	×	○	○	26W	W216 (8.5) × H176 (6.9) × D107 (4.2)	2.4kg (5.29 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50
HLM-910P		8.4"	4RU	1024 × 768	○ 2	△ 1	×	○ 2	×	△ 2	○ 1	○	○	○	AC 27W DC 23W	W216 (8.5) × H176 (6.9) × D99 (3.9)	2.1kg (5.07 lbs)	• 1080i/60, 59.94 • 1080i/50 • 1080p/30, 29.97 • 1080psF/30 • 1080p/25 • 1080psF/25 • 1080p/24, 23.98 • 1080psF/24, 23.98 • 1035i/60, 59.94 • 720p/60, 59.94 • 720p/50 • 720p/30, 29.97 • 720p/25 • 720p/24, 23.98 *1 • 480i/59.94 • 480p/59.94 *2 • 575i/50

△ Option

*1 Available with SDI Input only *2 Available with RGB/Y, P_b, P_r Input only *3 Minimum Power Consumption at Standard Configuration

		Display Size (Viewing Area)	Contrast Ratio	Resolution Number of Pixel (Max Brightness)	Input Signal						Speaker (stereo)	Tally		Power Consumption	Dimensions mm (inch)	Weight kg (lbs)	Feature
					VBS	Y, P _b , P _r /RGB	Y/C	HD/SD-SDI	DVI-D	Embedded Audio		R	G				
Full HD LCD Monitor																	
HLM-2400		24"	1000:1	1920X1200 (WUXGA)	○ 2	○ 1	×	○ 2	○ 1	○ 2	○	○	○	125 W	W564 (22.2) X H408 (16.1) X D99 (3.9)	8.7kg (19.1 lbs)	1920X1080 Native HD Resolution Accepts all HD formats Up to 12ch audio level indicator Time Code On/Off function Accurate color reproduction 1:1 Scan for pixel-to-pixel 720p display