



ECO SERIES

EE-NVR32

H.265/H.264 5MP
32 CH NVR System


Our newest addition to our fine line of products is the EE-NVR32 a 1080p Real-time H.265/H.264, Network Video Recorder, that meets the most stringent demands of today's CCTV Professional.

Our new **EE-NVR32** is a 32 CH IP Input 8/ 16/ 32 CH 5MP/ 4MP/ 3MP/ 1080P/ 960P/ 720P high definition NVRs that goes to a whole new level of security recording performance by fully supporting the most advanced SOC technique to ensure high definition recording in each channel with exceptional robustness of the system.


EE-NVR32 supports support 8/ 16 /32 CH , simultaneous 16 Channel playback with 4K high definition display, while achieving an exceptional robustness of the system. The **EE-NVR32** ECO series product, will meet diverse security requirements for the financial, commerce, enterprise, transportation, residential and government environments within others.

FEATURES

- Supports 32 CH 5MP / 4MP / 3MP / 1080P / 960P / 720P IP input
- Adopts standard H.265 and H.264 high profile compression format to get high-quality video at much lower bit rate
- Intuitive and user-friendly Graphic User Interface (GUI), Windows style operation by mouse
- Multi-mode recording: manual / timer / motion / sensor
- Playback : 8/ 16/ 16 CH simultaneous playback
- Search : time slice, time, event (manual, sensor, motion), tag search
- Express and flexible backup via USB or network
- Pentaplex : preview, record, playback, backup and remote access
- DHCP, DDNS, PPPoE network protocol and CMS supported
- Remote control via IE or CMS: preview, playback, backup, PTZ and configuration
- Dual stream technology for local storage with high definition, remote network transmission and remote surveillance with mobile device
- Multi-user online simultaneously
- Authorization management, log view and device status view
- 4K output, true high resolution display
- Supports PTZ preset and auto cruise, up to 255 presets and 8 cruises
- Supports NAT function and QR Code scanning by mobile phone and Tablet
- Powerful smart phone & Pad surveillance with iOS and Android OS

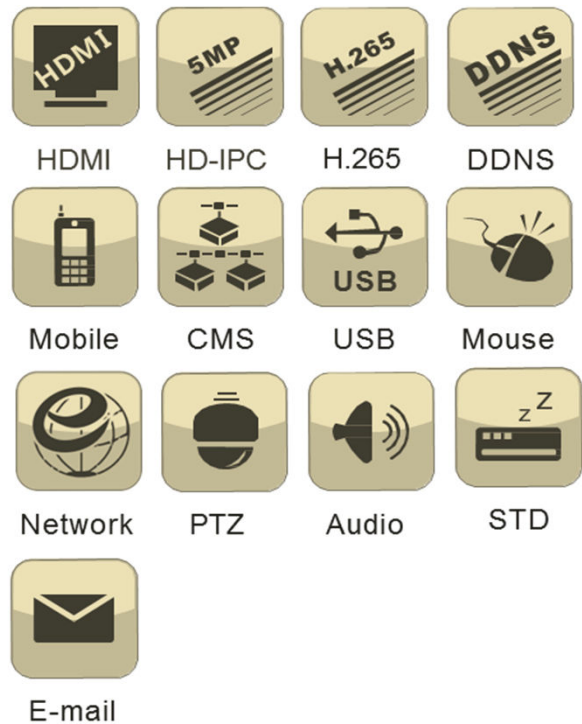

Dimensions

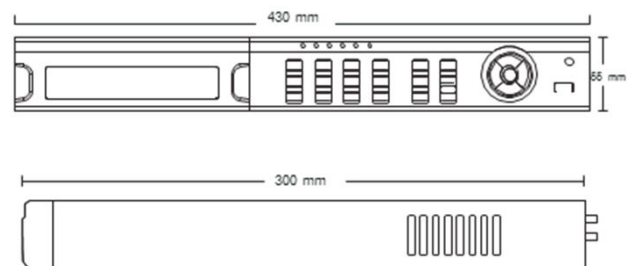



ECO SERIES

EE-NVR32

H.265/H.264 5MP
32 CH NVR System

SPECIFICATIONS

System	
Compression	Standard H.265 / H.264
OS	Embedded Linux
Video	
Network Input	32 CH IPC input
Network Bandwidth	256Mbps
Network Format	5MP / 4MP / 3MP / 1080P / 960P / 720P@25 / 30fps
Output	HDMI × 1 : 4K × 2K / 1920 × 1080 / 1280 × 1024, VGA × 1 : 1920 × 1080 / 1280 × 1024
Audio	
Network Input	32 CH IPC audio input
2-way Audio	RCA × 1
Local Output	RCA × 1
Record Stream	
Record Stream	Dual stream recording
Resolution	5MP / 4MP / 3MP / 1080P / 960P / 720P
Mode	Manual, timer, motion, sensor
Playback	
Playback	Max 16 CH
Search	Time slice / time / event / tag search
Smart Search	Highlighted color to display the camera record in a certain period of time, different colors refers to different record events
Function	Play, pause, FF, FB, digital zoom, etc.
Alarm	
Mode	Manual, sensor, motion, exception
Input	Support IPC alarm input
Output	Support IPC alarm output
Triggering	Record, snap, preset, e-mail, etc.
Network	
Interface	RJ45 10 / 100 / 1000 Mbps × 1
Protocol	TCP / IP, PPPoE, DHCP, DNS, DDNS, UPnP, NTP, SMTP
Web Client	Max 10 users online
Mobile Device	
OS	iOS, Android
Storage	
HDD	SATA × 2, max 6T per HDD
Back Up	
Local Backup	U disk, USB mobile HDD
Network Backup	Yes
USB	USB 2.0 × 1 (front panel), USB 3.0 × 1 (rear panel)
General	
Power Supply	DC 12V
Consumption	≤ 15W (without HDD)
Dimensions (mm)	430 × 300 × 55 (W × D × H)
Work Environment	-10 ~ 50 °C , 10% ~ 90% humidity

Design and specifications are subject to Change without notice.